




Indiana Department of Transportation
Driving Indiana's **Economic Growth**

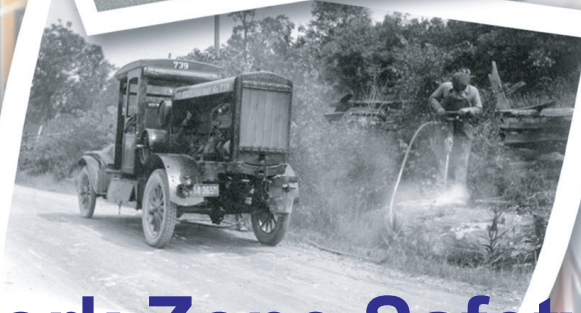

Work Zone Safety

**Guidelines for Construction, Traffic
Maintenance, and Utility Operations**

November 2006

INDOT Work Zone Safety Manual (WZSM)

APPROVED: **DATE:** 11/9/06



Deputy Commissioner of Highway Operations

APPROVED: **DATE:** 11/3/06



Deputy Commissioner of Highway Management

Revisions:

[illegible]

Table of Contents

Introduction	1
Traffic Control Devices	1
Signs	1
Channelizing Devices	5
Warning Lights	7
Arrow Displays	8
Pavement Markings	9
Fundamental Principles	9
Parts of a Traffic Control Zone	10
Taper Length Criteria for Work Zones	11
Buffer Lengths	12
Supervisor's Checklist	12
Planning the Layout	13
Duration of Work	13
Location of Work	13
What Traffic Control Setup Should I Use?	14
Curvy and Hilly Locations	14
Night Time Traffic Control	15
Typical Application Diagrams	17
Definitions of Terms	18
 Short Term Stationary (1 to 12 hours)	
Work off the Traveled Lanes	19
Work on Paved Shoulders or Parking Lanes	20
Paved Shoulder Closed on Divided Roadway	21
Lane Closure on a Two-Lane Road	22
Center Turn Lane Closed	23
Lane Shift on a 3-Lane, 2-Way Road	24
Lane Closure on a 4-Lane Undivided Road	25
Lane Closure on Divided Roadway or 1-Way Street	26
Double Lane Closure on Divided Roadway	27
Half Road Closure on Multilane Roadway	28-29
Mainline Right Lane Closed, Entrance Ramp Open	30
Mainline Left Lane Closed, Entrance Ramp Open	31
Mainline Right Lane Closed, Exit Ramp Open	32
Work in Vicinity of Exit Ramp	33-34
Partial Ramp Closure	35
Partial Ramp Closure Work in Gore Area	36
Lane Closure in Advance of an Intersection	
<i>Work Area on the Through Road</i>	37
<i>Work Area on the Side Road</i>	38
Lane Closure Beyond an Intersection	
<i>Work Area on the Through Road</i>	39
<i>Work Area on the Side Road</i>	40-41
Lane Closure at a Multilane Intersection	42

Turn Lane Closure at an Intersection	43
Lane Closure on Far Side of Intersection	44
Closure in Center of Intersection	45
Short Duration (up to 1 hour)	
Work off the Traveled Lanes	46
Work on Paved Shoulders or Parking Lane	47
Work on Paved Shoulder Closed on Divided Roadway	48
Lane Closure on Divided Roadway or One Way Street	49
Lane Closure on a Two-Lane Road	50
Temporary Road Closure	51
Lane Closure in Advance of an Intersection	
<i>Work Area on the Through Road</i>	52
<i>Work Area on the Side Road</i>	53
Lane Closure Beyond an Intersection	
<i>Work Area on the Through Road</i>	54
<i>Work Area on the Side Road</i>	55
Lane Closure at Side of Intersection	56
Closure in Center of Intersection	57
Lane Closure at a Multilane Intersection	58
Turn Lane Closure at an Intersection	59
Partial Ramp Closure	60
Partial Ramp Closure Work in Gore Area	61
Mobile Operations	
Mobile Operations	62
On Paved Shoulder for all Roads	63-64
On a Two-Lane Road	65-66
On a Two-Lane Road Using Flaggers	67
On a Two-Lane Divided Road	68
On a Multi-Lane Divided Road	69-70
Pedestrian and Worker Safety	71
Sidewalk Closure—Pedestrian Detour	72
Sidewalk Closure—Pedestrian Walkway Provided	73
Flagging Procedures	74
Acknowledgments	75
Quick Reference Guide	76

Introduction

The purpose of this handbook is to present guidelines for work zone traffic control and to supplement basic work zone safety training. This handbook covers the basic requirements of Part VI of the Manual on Uniform Traffic Control Devices (MUTCD) with particular emphasis on short term work sites. These requirements apply to construction, maintenance, traffic, and utility work zones.

This handbook presents information and gives examples of typical traffic control applications for two-lane and multi-lane work zones. This information is intended to illustrate the principles of proper work zone traffic control, but is **not** a standard. Part VI of the MUTCD and the Indiana MUTCD Supplement contain the standards for work zone traffic control.

Worksite traffic control diagrams provide **minimum** requirements, additional traffic control or protection can be added. This manual covers work setups as presented in the INDOT maintenance/traffic management system.

Incident Management Situations

The immediate response to an emergency situation must by necessity make use of available devices and equipment. Given the opportunity, however, longer term emergencies should be treated in a manner similar to other temporary traffic control work sites.

Traffic Control Devices

The following types of traffic control devices are used in work zone traffic control:

- Signs
- Channelizing Devices
- Warning Lights
- Arrow Displays
- Pavement Markings

Signs

Signs used in work zone traffic control are classified as regulatory, guide, or warning. Regulatory signs impose legal restrictions and may not be used without permission from the authority with jurisdiction over the roadway. Guide signs commonly show destinations, directions, and distances. Warning signs give notice of conditions along the roadway.

Spacing of Advance Warning Signs

	Sign Spacing (feet)				
	25-30 mph	35-40 mph	45-55 mph	Multilane Divided 50 mph or higher	Expressway/ Freeway
A	100	350	500	1,000	1,000
B	100	350	500	1,600	1,600
C	100	350	500	2,640	2,640


Distances shown are approximate. Sign spacing should be adjusted for curves, hills, intersections, driveways, etc., to improve sign visibility.

Warning Signs – Construction, maintenance, traffic and utility warning signs are used extensively in street and highway work zones. These signs are normally diamond shaped, having a black symbol or message on an orange background. As a general rule, these signs are located on the right-hand side of the street or highway. Normally, the first advance warning sign used is the ROAD WORK AHEAD sign. The UTILITY WORK AHEAD or WORKERS sign may be substituted where appropriate. Where signs are used to indicate the end of the work zone, the END ROAD WORK or END UTILITY WORK sign may be used as appropriate.





Size – The standard size for advance warning signs in work zones is generally 48 inches by 48 inches. Where speeds and volumes are moderately low, a minimum size of 36 inches by 36 inches may be used (see Part VI of the MUTCD for specific sign sizes). Sign sizes in contract plans or other agency documents may exceed MUTCD minimum requirements and shall be followed.

Mounting – Standards for height and lateral clearance of roadside signs are included in Part VI of the MUTCD. Temporary post-mounted signs should be mounted at a height of at least 7 feet, measured from the bottom of the sign. Signs mounted on Type III barricades which close any part of a road or lane should not cover more than 50 percent of the top two rails or 33 percent of the total area of the three rails. Signs mounted on other portable supports or barricades used solely as a sign support may be at lower heights, but the bottom of the sign shall be not less than one foot above the traveled way.


Removal – When work is suspended for short periods, all signs that are no longer appropriate shall be removed, covered, turned, or laid flat so they are not visible to drivers.

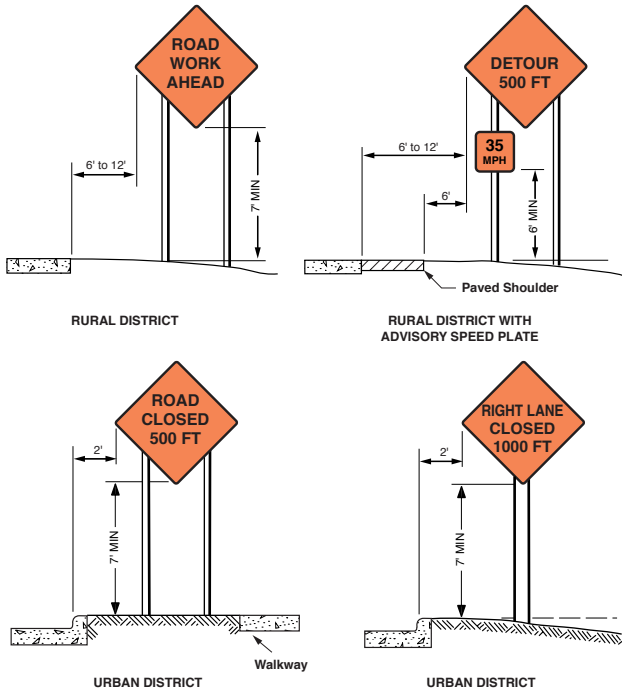

Illumination and Retroreflectorization – All signs used during the hours of darkness shall be made of retro-reflective material or illuminated. (Street or highway lighting is not regarded as meeting the requirements for sign illumination.)

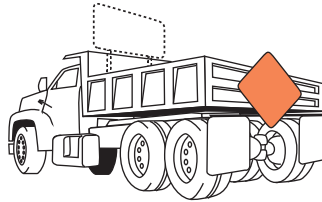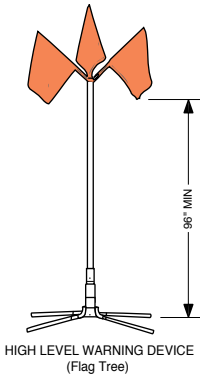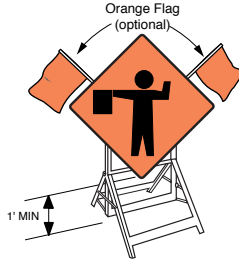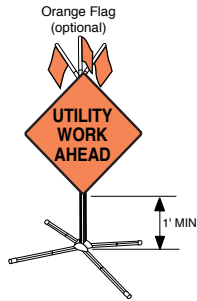


PORTABLE AND TEMPORARY MOUNTINGS

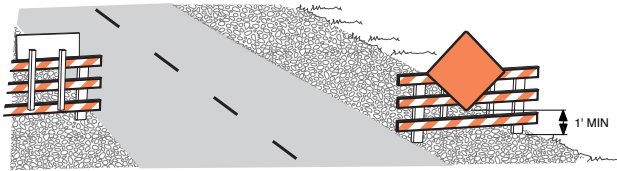

Portable Changeable Message Signs – Portable Changeable Message Signs may be used to supplement other signs, but not to substitute for any required signs. They may display a variety of messages and displays, but are typically only used to display “real-time” or changing condition information. The Changeable Message Signs shall not display more than two messages or displays, and the entire message should be readable twice at the usual roadway speed limit.

Channelizing Devices

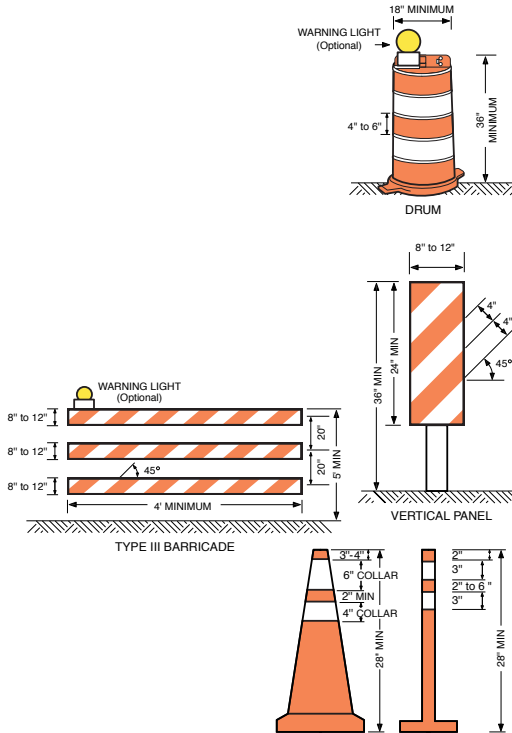

Notes:

1. Stripes on barricade rails slope downward at an angle of 45 degrees toward the direction traffic is to pass.
2. Barricade rail stripe widths shall be 6 inches except where rail lengths are less than 36 inches, then 4 inch wide stripes may be used.
3. The sides of barricades facing traffic shall have retroreflective rail faces.
4. All channelizing devices should meet National Cooperative Highway Research Program (NCHRP) Report 350 Crash Test Requirements.

Channelizing Devices

Channelizing devices are used to warn and alert drivers of conditions in work zones, to protect workers, and to guide and direct drivers and pedestrians safely. Channelizing devices include cones, tubular markers, vertical panels, drums, barricades, and barriers.

Cones are used most commonly for short-duration maintenance and utility work. Cones used at night shall be retro-reflectorized as shown on page 5. Drums are used most commonly where they will remain in place for a prolonged period. Ballast shall not be placed on top of channelizing devices.

Spacing

Cone or barrel spacing for straight-a-ways should be:

- At 55 mph & below: 1 cone for every 80' (every other skip)
- At 60 mph & above: 1 cone for every 120' (every 3 skips)

Warning Lights

Warning lights may supplement retroreflectorization on warning and channelizing devices. They are especially useful in areas prone to fog or frequent inclement weather. Warning lights shall have a minimum mounting height of 30 inches. The principal types and uses of warning lights are:

1. **Low intensity Flashing Lights (Type A)**
May be mounted on barricades or drums to warn of an isolated hazard at night. They may also be mounted on signs.
2. **High intensity Flashing Lights (Type B)**
May be mounted on advance warning signs, or on independent supports to draw attention to extreme hazards both day and night.
3. **Low intensity Steady-Burn Lights (Type C)**
May be used in a series to delineate the edge of the travelway and channelize traffic at night.

Vehicle hazard lights, four way flashers, shall not be used as vehicle warning lights, but may be used to supplement vehicle warning lights. Vehicle warning lights are defined in the INDOT Vehicle Lighting Policy.

Common Conversions:

1 skip = 10'

Gap between skips = 30'

RPM spacing (No Passing Zone) = 40'

RPM spacing (Passing Zone) = 80'

0.1 mile = 528'

0.2 mile = 1056'

0.3 mile = 1584'

0.4 mile = 2112'

0.5 mile = 2640'

0.6 mile = 3168'

0.7 mile = 3696'

0.8 mile = 4224'

0.9 mile = 4752'

1.0 mile = 5280'

Arrow Displays

An arrow display in the arrow or chevron mode may be used to supplement signs and other devices for lane closures on multilane roadways. An arrow display in the caution mode shall be used only for shoulder work, blocking the shoulder, or roadside work near the shoulder.

Panel Type	Roadway Speed	Min. Size	Min. # Lamps	Min. Legibility Distance
A	25-30 mph	24" x 48"	12	1/2 mile
B	35-40 mph	30" x 60"	13	3/4 mile
C	≥ 45 mph	48" x 96"	15	1 mile

OPERATING MODE

At least one of the three following modes shall be provided:

PANEL DISPLAY*

(Right shown; left similar)

Flashing Arrow



Move/Merge Right

Sequential Arrow



Move/Merge Right



Sequential Chevron



Move/Merge Right



The following mode shall be provided:

Flashing Double Arrow



Move/Merge Right or Left

The following mode shall be provided:

Flashing Caution



or



Caution

*Element layout for Type C Panel shown

Pavement Markings

For long-term stationary projects, follow the guidelines of Part VI of the MUTCD in placing and removing pavement markings. The colors of temporary pavement markings and delineators follow the same standard as for permanent markings. When used to enhance the visibility of the roadway edge, white is specified along both sides of two-way roadways and the right side of one-way roadways. Yellow is used on the left side of one-way roadways. Centerlines and lane lines are yellow when separating opposing directions of traffic and white when separating lanes going the same direction.

Where existing pavement marking conflicts with the temporary travel path, additional signing and channelizing devices are appropriate.


Fundamental Principles

The principles listed below provide a guiding philosophy of good temporary traffic control and enhance the safety of motorists, pedestrians, and workers in the vicinity of temporary traffic control zones.

1. Make traffic safety and temporary traffic control an integral and high-priority element of every project from planning through design, construction, and maintenance.
2. Inhibit traffic movement as little as possible.
3. Provide clear and positive guidance to drivers and pedestrians as they approach and travel through the temporary traffic control zone.
4. Inspect traffic control elements routinely and make modifications when necessary.
5. Pay increased attention to roadside safety in the vicinity of temporary traffic control zones.
6. Train all persons that select, place, and maintain temporary traffic control devices.
7. Establish proper legislative authority to implement and enforce needed traffic regulations, speed zoning, parking controls, and incident management.
8. Keep the public well informed.
9. If there is a side road intersection or ramps within the work area, additional traffic control, such as flaggers and appropriate signage, may be needed on the side road approaches or ramps.
10. Good judgment must always be used to determine the final traffic control setup.

Parts of a Traffic Control Zone

The traffic control zone is the distance between the first advance warning sign and the point beyond the work area where traffic is no longer affected. Below is a diagram showing the six parts of a traffic control zone.

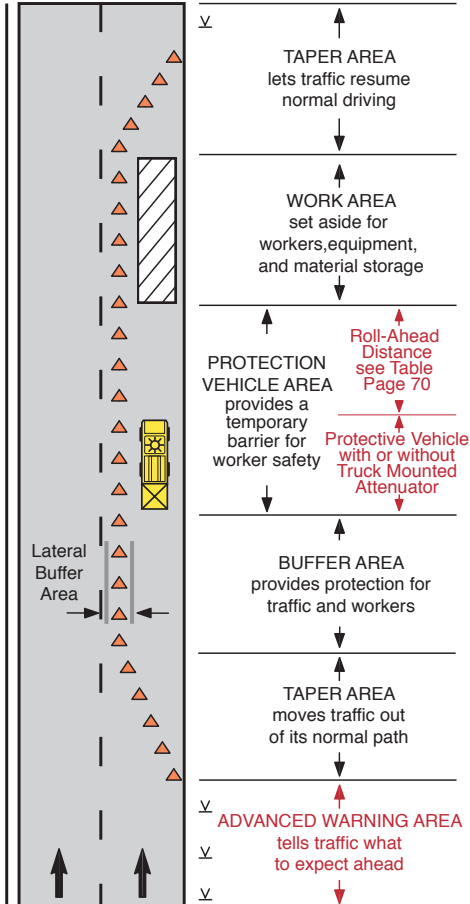

Taper Length Criteria for Work Zones

The five types of tapers used in work zone traffic control are:

Type of Taper

- 1) *Merging Taper* – The number of lanes is reduced on a multilane road
- 2) *Shifting Taper* – A lateral shift, but no reduction in the number of travel lanes
- 3) *Shoulder Taper* – The shoulder is closed
- 4) *Two-way Traffic Taper* – Opposing directions of traffic share one open lane
- 5) *Downstream Taper* – The work area ends and traffic resumes normal driving (use is optional)

TABLE II INDOT STANDARD TAPERS

	Speed (mph)	Shoulder Tapers			Shifting Tapers			Merging Tapers		
		L	CS	#	L	CS	#	L	CS	#
Low Speed	30	60	20	3	90	20	5	180	20	9
	35	90	20	5	140	20	7	260	20	13
	40	120	40	3	160	40	4	320	40	8
High Speed	45	200	40	5	280	40	7	560	40	14
	50	200	50	4	300	50	6	600	50	12
	55	220	50	5	350	50	7	700	50	14
	60	240	60	4	360	60	6	720	60	12
	65	300	60	5	400	60	7	780	60	13
	70	300	60	5	420	60	7	840	60	14
2-Way & Downstream Tapers are always 100/20/6										
L=Length CS=Cone Spacing #=Quantity of Cones										

Distance of Flagger Station in Advance of the Workspace			
Speed (mph)	Distance	Speed (mph)	Distance
20	35	45	220
25	55	50	280
30	85	55	335
35	120	60	415
40	170	65	485

Buffer Lengths

The buffer area is a recommended part of the work zone. It serves to separate traffic flow from the work area or a potentially hazardous area and provides recovery space for an errant vehicle. The buffer area should not include any work activity nor storage of equipment, vehicles or material.

Guidelines for Buffer Lengths

Speed (mph)	Length (ft)	Speed (mph)	Length (ft)
20	35	45	220
25	55	50	280
30	85	55	335
35	120	60	415
40	170	65	485
		70	580

A lateral buffer space may also be used to separate passing traffic from the work area. Its use and width is based on conditions at the work site.

Supervisor's Checklist

1. Have a traffic control plan before going to the work site.
2. Ask yourself, "What is the driver's view of the work site—at night, during peak hours, etc."
3. Investigate crashes/incidents to identify if changes are needed in the traffic control plan.
4. For overhead work, traffic control is required for affected lane(s).

Planning the Layout

The key to good traffic control is to apply the guidelines using proper judgment. Consider factors such as duration of work, location of work, and characteristics of the roadway.

Duration of Work

Work duration is a major factor in determining the number and types of devices used in temporary traffic control zones. As a general rule, the longer the operation will last, the more traffic control devices are needed. Also, as the work time is short, the time during which motorists are affected is significantly increased when additional devices are installed and removed. Considering these factors, it is generally held that simplified control procedures are warranted for short-duration activities. Such shortcomings may be offset by the use of other, more dominant devices, such as special lighting units on work vehicles.

Long-Term Stationary – Work that occupies a location more than 3 days.

Intermediate-Term Stationary – Work that occupies a location from overnight to 3 days.

Short-Term Stationary – Daytime work that occupies a location for 1 to 12 hours.

Short Duration – Work that occupies a location up to 1 hour.

Mobile – Work that moves intermittently or continuously.

Location of Work

The choice of traffic control needed for a temporary traffic control zone depends upon where the work is located. As a general rule, the closer the work is to traffic, the more control devices are needed.

What Traffic Control Set-Up Should I Use?

These five questions should be considered and answered in order to provide proper worksite traffic control.

1. What is the type of road (two-lane or multi-lane) on which we will be working?
2. Are we working on the roadway or shoulder?
3. How long will we be at a location?
4. Is extra protection needed?
5. Is a lane being restricted or encroached upon?

Curvy and Hilly Locations

These locations may require extra work zone safety measures.

Night Time Traffic Control

Extra care should be taken when scheduling work at night. Plan ahead whenever possible, involving all affected personnel, to ensure that everyone understands what is expected of them and that you have the proper traffic control equipment for the job. As stated on page 1 of this manual, the immediate response to an emergency situation must by necessity make use of available devices and equipment. Given the opportunity, however, longer term emergencies should be treated in a manner similar to temporary traffic control as soon as possible.

The work-zone controls mentioned in this manual are the minimum requirements and extra controls should be utilized when needed. Closing additional lanes when possible and the use of message boards are just 2 of the tools available.

Specifically the following are guidelines to follow when performing night time activities:

Signs: Must be retroreflective (see page of this manual for more details)

Message Boards: Portable message signs may be used to alert the public of the work ahead.

See page 4 for specific details and how the sign should be used). It is a good practice to display the message a day ahead.

Arrow Boards: Lights should be dimmed for night operations (most boards dim automatically).

Personal Protective Equipment: Hi viz safety apparel shall be worn during night time operations (consult the INDOT Safety Manual for specific details).

Channeling Devices: Cones must be 28" and have retroreflective tape. Barrels must have retroreflective tape or Warning Lights (where required). Barricade panel must be - Type 3. (See page 5 of this manual for more details). It is also a good practice to have night patrols available to reset traffic control devices as needed.

Lighting - Worksite Illumination: Portable light towers with generator should be used to illuminate the work area. The preferred light strength should be Class III 215 lux (20ft candles). Every effort shall be made to prevent glare affecting oncoming traffic.

Vehicle Work Lights: Lights shall be added to work equipment as needed. Equipment lighting shall also be positioned to prevent glare to motorist.

General Safety: Trucks pulling arrow board for night time operations should turn off all warning lights and flashers to the rear to prevent distracting from the view of the arrow board. Headlights should be on during mobile operations.

Typical Application Diagrams












The diagrams on the following pages represent examples of the application of principles and procedures for safe and efficient traffic control in work zones but are not intended to be standards. It is not possible to include illustrations to cover every situation which will require work area protection. These typical layouts are not intended as a substitute for engineering judgment and should be altered to fit the conditions of a particular site. Contract plans or other agency documents may also have applicable layouts to be followed.

The diagrams are not to scale, and the number of channelizing devices shown may not be the number needed at the work site. **Work vehicles are not shown in diagrams.** Use the tables on the typical diagrams to determine taper and buffer lengths, and use pages 6 and 11 for guidance on the spacing and number of devices.

The notes and tables on the typical diagrams provide important information for the user. All items shown on diagrams are to be considered mandatory, unless stated otherwise.

Read all notes before using these diagrams. The information presented in these diagrams and tables are generally minimums. For further information, refer to Part VI of the MUTCD and the Indiana MUTCD supplement. These contain the standards for work zone traffic control.

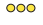Legend

	Channelizing Device		Protection Vehicle with Flashing Light
	Arrow Board Display		High Level Warning Device
	Flagger Symbol		Work Area
	Portable Sign Support		Warning Sign
	Arrow Board Display Symbol		Protection Vehicle with Truck-Mounted Attenuator (TMA)
	Changeable Message Sign		

Protection vehicle for INDOT shall be a dump truck loaded with sand and parked at an angle. If a TMA is used, the truck shall be loaded per TMA manufacturers specifications (load of sand may not be needed with a TMA), parked parallel to traffic, front wheels angled away from traffic, and may be either a dump or 2 ton stakebed vehicle. Drawings are not to scale. The drawings do not depict the number of channelizing devices to use.

Definitions of Terms

Shall/Mandatory - Required condition.

Should/Recommend - An advisory condition. Where these words are used, they are considered to be advisable usage.

May/Optional - A permissive condition. No requirement for design or application is intended.


Not for INDOT use - Not for use on INDOT roads.

For work not specifically covered in our WZSM, the Indiana MUTCD will need to be consulted, but where our WZSM has added devices, etc, the WZSM shall take precedent.

Short Term Stationary
(1 to 12 hours)

***Work off the Traveled Lanes
Includes Paved Shoulder <8ft.***


(Short Term Stationary - 1 to 12 hours)

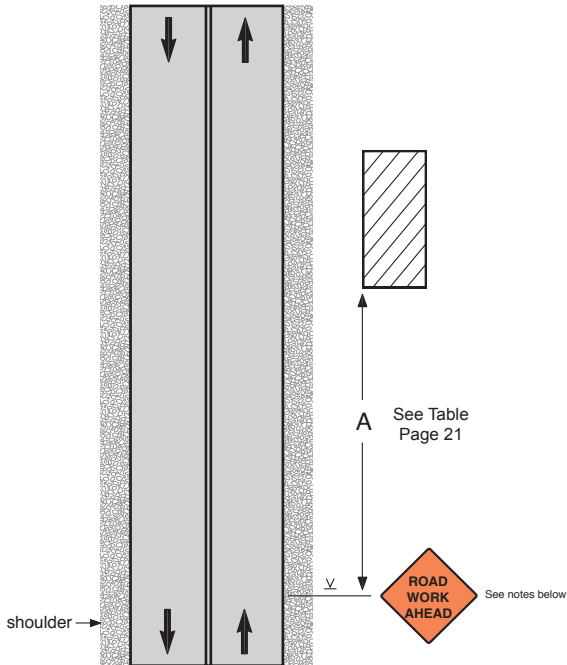

Notes:

1. Other acceptable advance warning signs are those indicating SHOULDER WORK, UTILITY WORK AHEAD, or the WORKERS sign.
2. An advance warning sign should be used; if the work will be performed immediately adjacent to the shoulder, if equipment will cross or move along the roadway, or if the activity may distract motorists.
3. Warning signs may be eliminated if the work space is behind a barrier, more than 2ft. behind a curb, or 15ft. or more from the edge of any traveled lane.
4. For work beyond the shoulder, all warning signs and channelizing devices are optional if a vehicle with activated warning lights is used.

**Work on Paved Shoulders ≥ 8 ft.
or Parking Lanes**
(Short Term Stationary – 1 to 12 hours)

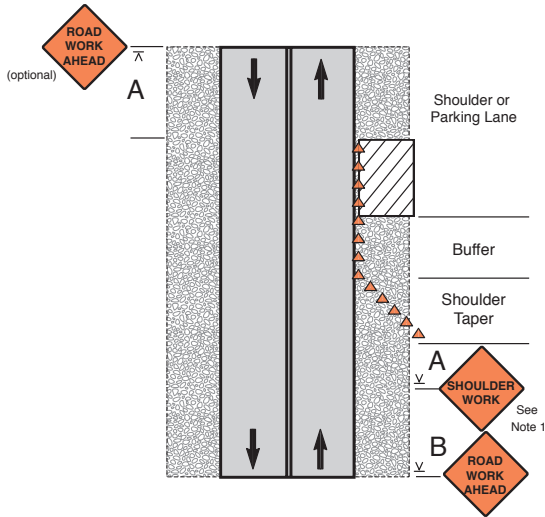


Notes:

1. WORKERS or UTILITY WORK AHEAD signs may be used instead of the SHOULDER WORK or ROAD WORK AHEAD signs.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

***Paved Shoulder ≥ 8 ft.
Closed on Divided Roadway
(Short Term Stationary – 1 to 12 hours)***

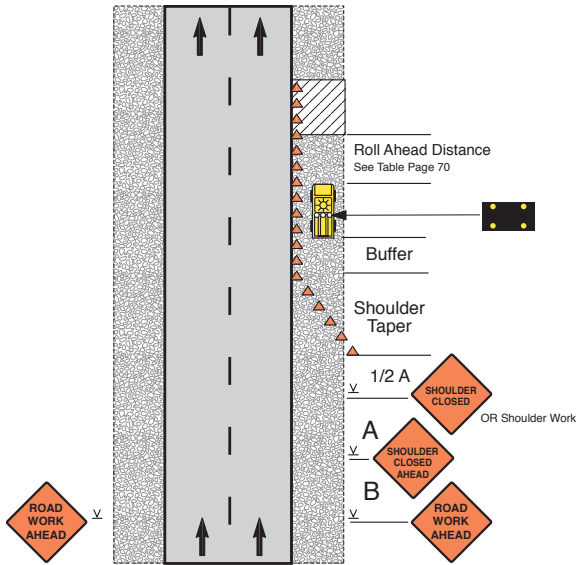


Notes:

1. SHOULDER CLOSED signs should be used on limited-access highways where there is no opportunity for disabled vehicles to pull off the traveled way.
2. UTILITY WORK AHEAD or WORKERS signs may be used instead of the ROAD WORK AHEAD sign.
3. Use of an arrow display is optional. If used, it shall be operated in the caution mode.
4. On non-freeway multilane roads in urban areas, the sign spacing may be reduced as shown in the chart on page 2.
5. ≤ 40 mph speed limit, protection vehicle optional.

Speed Limit (mph)	Sign Spacing (ft)		Buffer (ft)
	A	B	
35	350	350	120
40	350	350	170
45	500	500	220
50	1000	1600	280
55	1000	1600	335
60	1000	1600	415
65	1000	1600	485
70	1000	1600	580

Lane Closure on a Two-Lane Road (Two Flagger Operation) (Short Term Stationary – 1 to 12 hours)

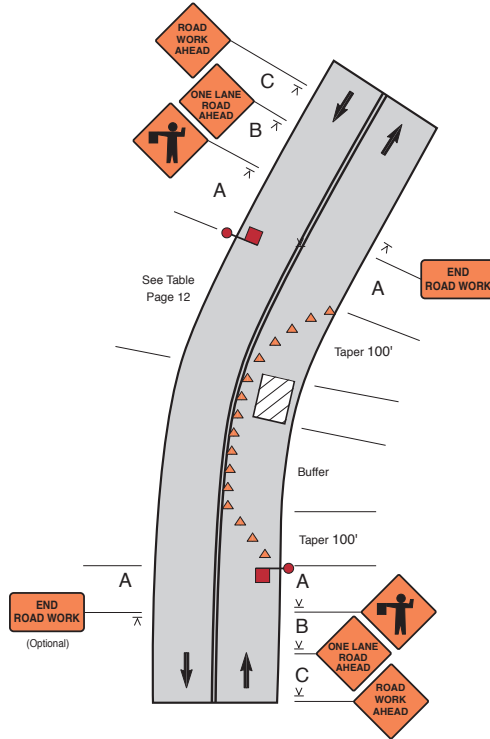


Notes:

- The flagger or flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
- If there is a sideroad intersection within the work area, additional traffic control, such as flaggers and appropriate signage, may be needed on the sideroad approaches.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415

Center Turn Lane Closed

(Short Term Stationary – 1 to 12 hours)

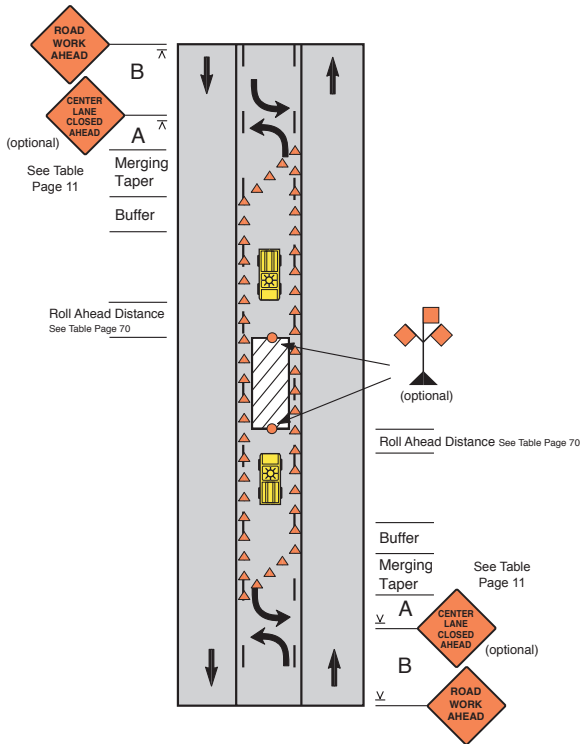


Notes:

1. LARGE ARROW sign may be used at the shift for added visibility.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

Lane Shift on a Three-Lane, Two-Way Road

(Short Term Stationary – 1 to 12 hours)

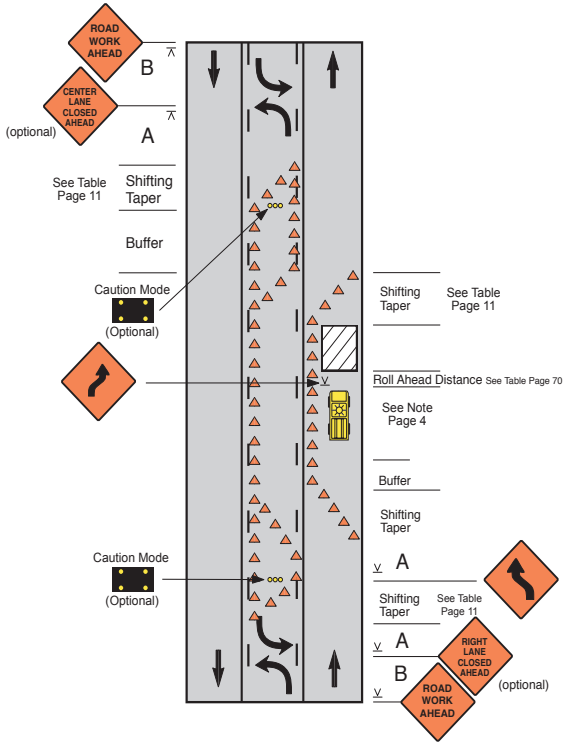


Notes:

1. LARGE ARROW signs may be used at the shifts for added visibility.
2. If the speeds are 30 MPH or less, REVERSE TURN signs shall be used instead of REVERSE CURVE.
3. ≤ 40 mph speed limit, protection vehicle optional.
4. If an arrow board is used on the protection vehicle, then it shall be in the caution mode.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

Lane Closure on a Four-Lane Undivided Road

(Short Term Stationary – 1 to 12 hours)

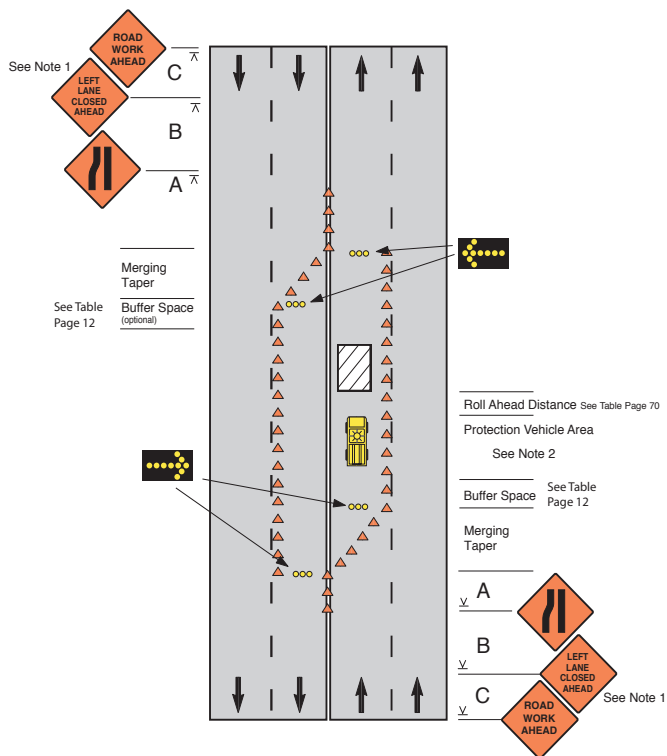


Notes:

1. ≤ 40 mph speed limit, protection vehicle optional, and LEFT LANE CLOSED AHEAD sign is optional.
2. If an arrow board is used on the protection vehicle, then it shall be in the caution mode.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415
65	1000	1600	2600	485

Lane Closure on Divided Roadway or One Way Street

(Short Term Stationary – 1 to 12 hours)

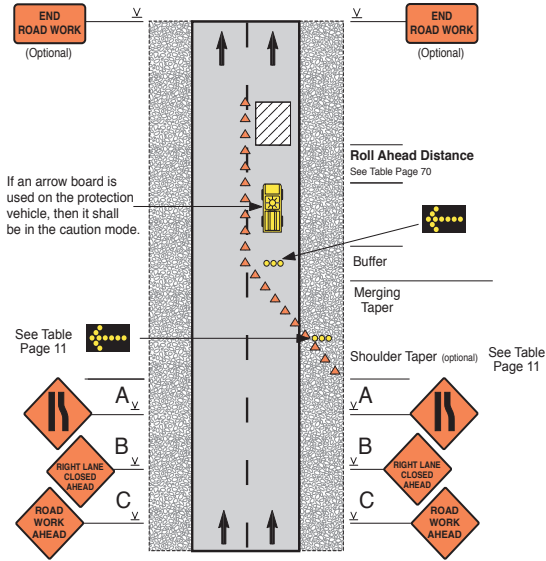


Notes:

- When a side road intersects the roadway within the work zone, additional devices shall be erected to channelize traffic to/from the side road, and a ROAD WORK AHEAD sign shall be placed on each side road approach.
- On non-freeway multi-lane roads in urban areas, the sign spacing may be reduced as shown in the chart on page 2.
- ≤40mph speed limit, protection vehicle optional.

Speed Limit (mph)	Sign Spacing (ft)			Buffer (ft)
	A	B	C	
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	1000	1600	2600	280
55	1000	1600	2600	335
60	1000	1600	2600	415
65	1000	1600	2600	485
70	1000	1600	2600	580

Double Lane Closure on Divided Roadway (Short Term Stationary – 1 to 12 hours)

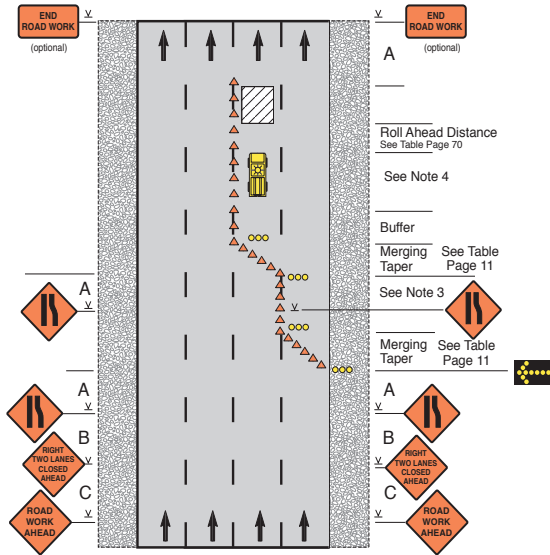


Notes:

- When a side road intersects the roadway within the work zone, additional devices shall be erected to channelize traffic to/from the side road, and a ROAD WORK AHEAD sign shall be placed on each side road approach.
- On non-freeway multilane roads in urban areas, the sign spacing may be reduced as shown in the chart on page 2.
- 1560 feet for ≤ 65 mph.
1680 feet for 70 mph.
- If an arrow board is used on the protection vehicle, then it shall be in the caution mode.

Speed Limit (mph)	Spacing (ft)			Sign Buffer (ft)
	A	B	C	
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	1000	1600	2600	280
55	1000	1600	2600	335
60	1000	1600	2600	415
65	1000	1600	2600	485
70	1000	1600	2600	580

Half Road Closure on Multilane Roadway

(Short Term Stationary – 1 to 12 hours)

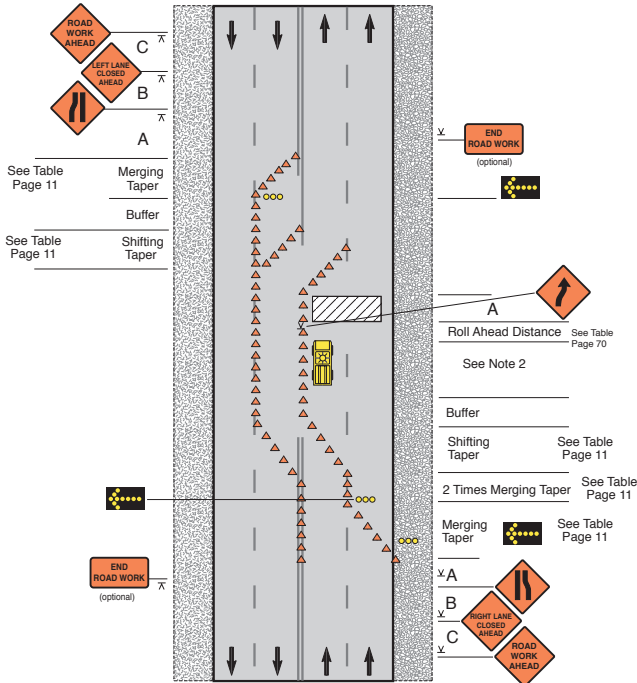

Notes:

1. ≤ 40 mph speed limit, protection vehicle optional.
2. If an arrow board is used on the protection vehicle, then it shall be in the caution mode.


Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415

Half Road Closure on Multilane Roadway (cont.)
(Short Term Stationary – 1 to 12 hours)

Notes

1. Channelizing devices shall be more closely spaced when the pavement markings conflict with the temporary travel path.
2. When a side road intersects the roadway within the work zone, additional devices shall be erected to channelize traffic to/from the side road and a ROAD WORK AHEAD sign shall be placed on each side road approach.


**Mainline Right Lane Closed,
Entrance Ramp Open**
(Short Term Stationary – 1 to 12 hours)

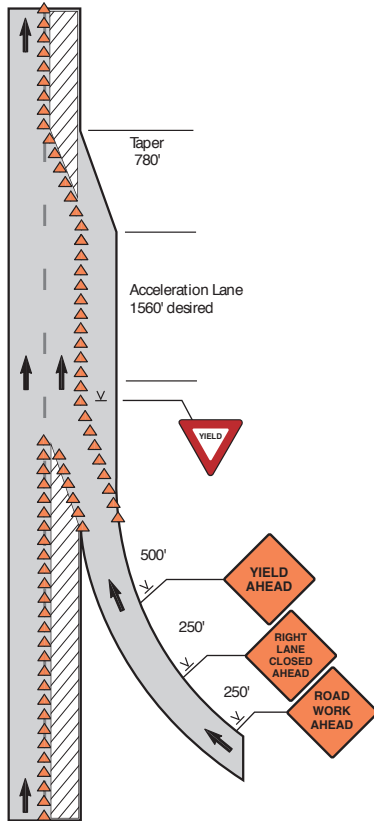

Notes:

1. Black on white 45mph sign on ramp is optional if mainline speed limit has been temporarily reduced to 45 mph.


**Mainline Left Lane Closed,
Entrance Ramp Open**
(Short Term Stationary – 1 to 12 hours)

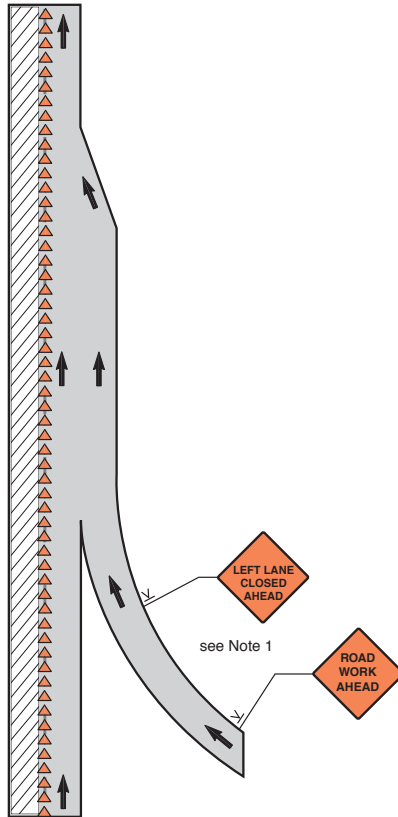

Notes:

1. The advance warning sign spacing is dependent on the ramp length and location of existing signing. The spacing should be as long as possible.
2. Black on white 45 mph sign on ramp is optional if mainline speed limit has been temporarily reduced to 45mph.


**Mainline Right Lane Closed,
Exit Ramp Open**
(Short Term Stationary – 1 to 12 hours)

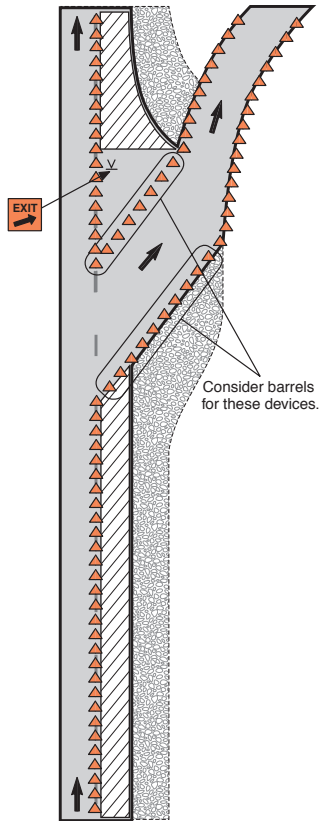

Notes:

1. The EXIT sign may be either black on orange or white on green.

Work in Vicinity of Exit Ramp (Short Term Stationary – 1 to 12 hours)

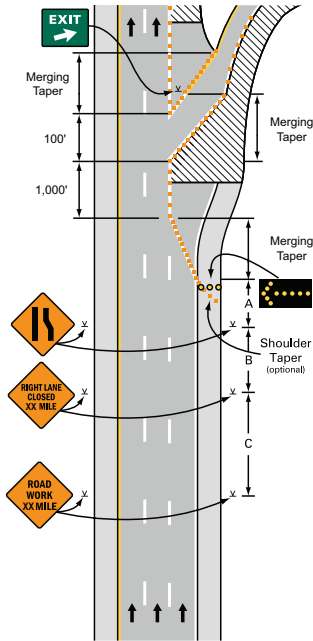


Speed Limit (mph)	Sign Spacing (ft)			Buffer (ft)
	A	B	C	
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	1000	1600	2600	280
55	1000	1600	2600	335
60	1000	1600	2600	415
65	1000	1600	2600	485
70	1000	1600	2600	580

Notes:

1. Sometimes closing the ramp may be the best course of action.
2. The EXIT sign may be either black on orange or white on green.

Work in Vicinity of Exit Ramp

(Short Term Stationary – 1 to 12 hours)

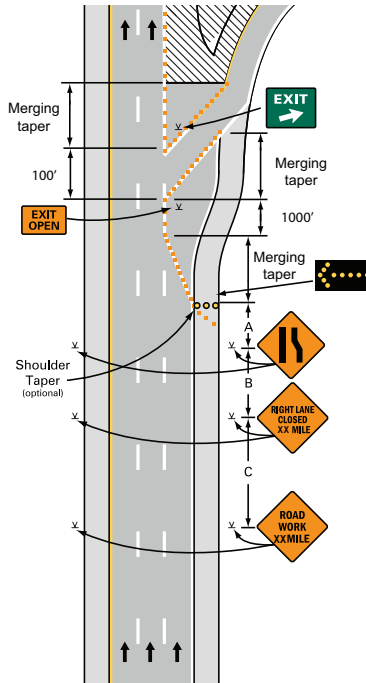


Notes:

1. Sometimes closing the ramp may be the best course of action.
2. The EXIT sign may be either black on orange or white on green.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415
65	1000	1600	2600	485
70	1000	1600	2600	580

Partial Ramp Closure ***(Short Term Stationary – 1 to 12 hours)***

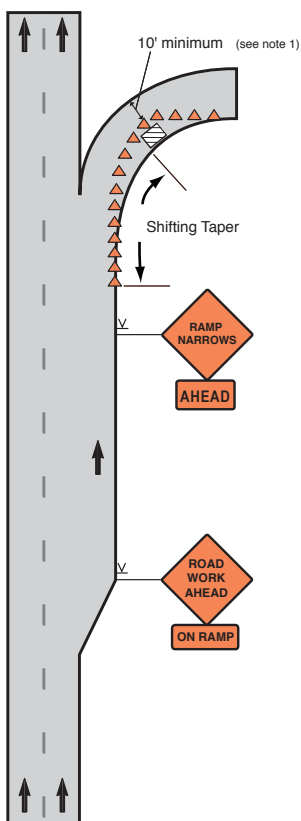


Notes:

1. Truck off-tracking should be considered when determining whether the 10' minimum lane width is adequate.
2. For work on the outside of the ramp, the cones will be shifted to that side, and the gore area extended upstream.

Partial Ramp Closure Work in Gore Area

(Short Term Stationary – 1 to 12 hours)

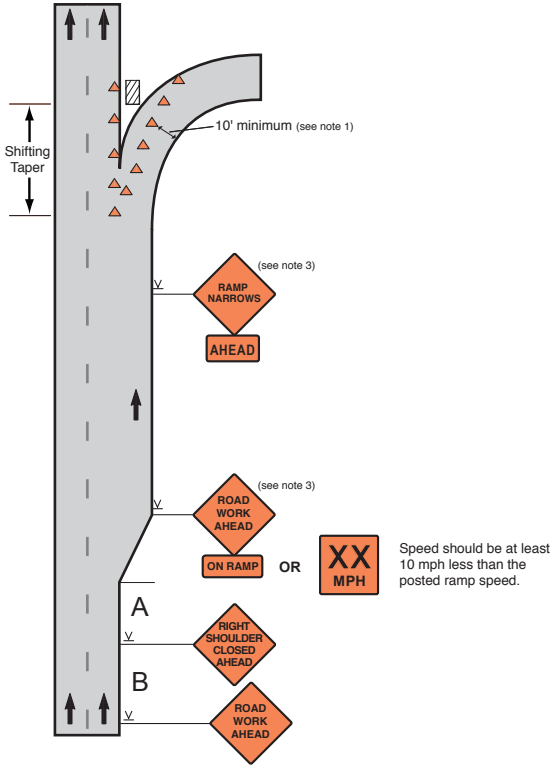


Notes:

1. Truck off-tracking should be considered when determining whether the 10' minimum lane width is adequate.
2. Protection vehicle recommended inside coned area, if roll ahead distance permits.
3. Required, if coned area or work area extends into the ramp.

Speed Limit (mph)	Sign Spacing (ft)	
	A	B
35	350	350
40	350	350
45	500	500
50	1000	1600
55	1000	1600
60	1000	1600
65	1000	1600
70	1000	1600

Lane Closure in Advance of an Intersection (Work Area on the Through Road) (Short Term Stationary – 1 to 12 hours)

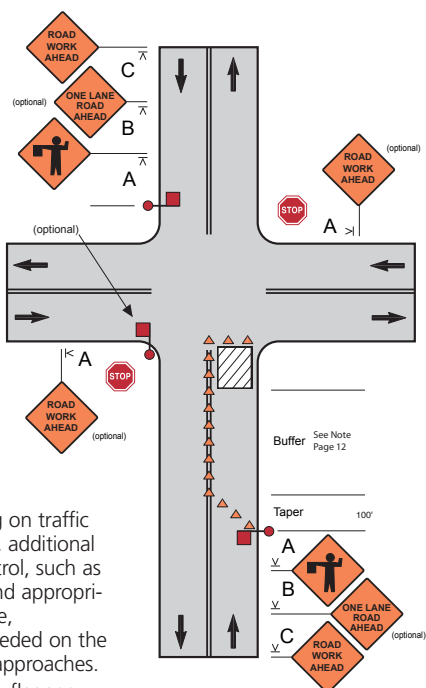

Notes:


1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed on the side road approaches.
2. The middle flagger (optional) has the best view of traffic from all directions. "Flagger Ahead" signs should be used in all 4 directions when the optional middle flagger is used.
3. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415

Lane Closure in Advance of an Intersection

(Work Area on the Side Road)

(Short Term Stationary – 1 to 12 hours)

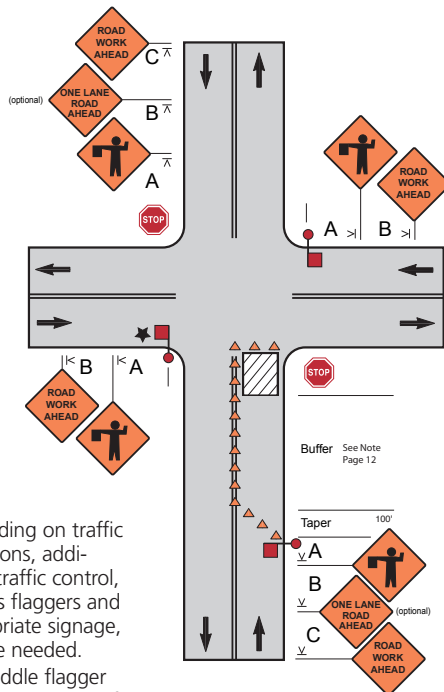

Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
- ★ 2. The middle flagger has the best view of traffic from all directions. This flagger should be designated **lead flagger** and should coordinate the actions of the other flaggers.
3. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.


Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415

Lane Closure Beyond an Intersection (Work Area on the Through Road) (Short Term Stationary – 1 to 12 hours)

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415


Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
2. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
3. When there is insufficient space the Taper and Buffer distances may be reduced.

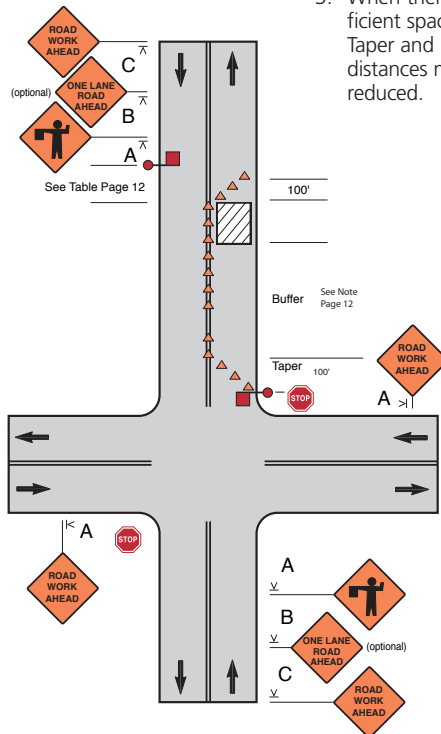

Lane Closure Beyond an Intersection (Work Area on the Side Road)

(Short Term Stationary – 1 to 12 hours)

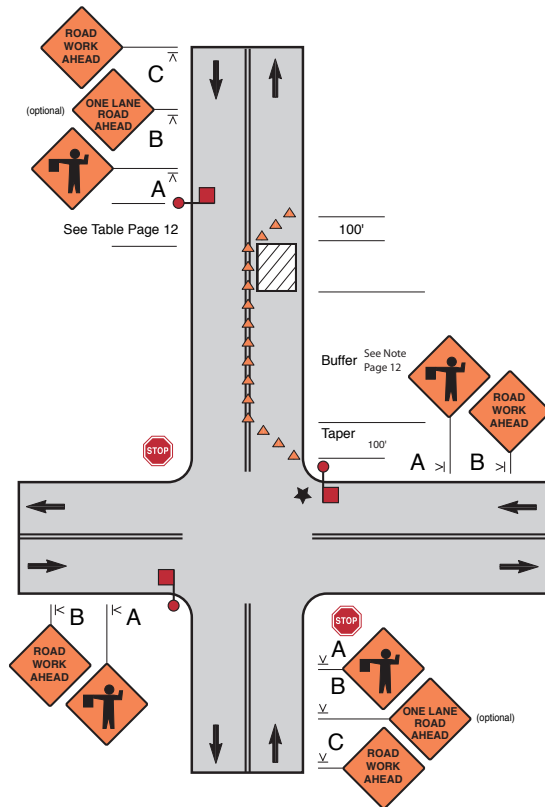

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415

Lane Closure Beyond an Intersection (cont.)


(Short Term Stationary – 1 to 12 hours)

Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
- ★2. The middle flagger should be designated ***lead flagger*** and should coordinate the actions of the other flaggers.
3. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
4. When there is insufficient space the Taper and Buffer distances may be reduced.

Lane Closure at a Multilane Intersection

(Short Term Stationary – 1 to 12 hours)

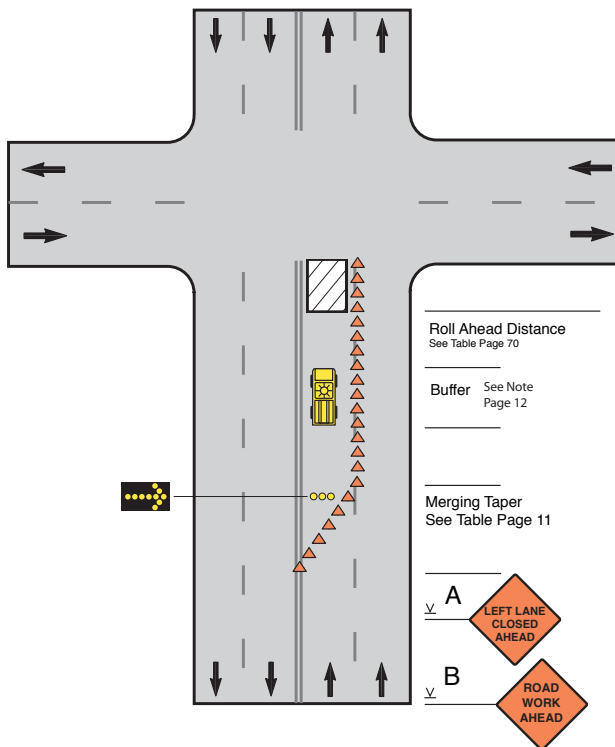


Notes:

1. For speed limit ≤ 40 mph, Protection vehicle optional.
2. If working on far side of intersection, see page 44.
3. The length of tapers may be adjusted when used in close proximity to crossroads, curves, or other influencing factors.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

Turn Lane Closure at an Intersection

(Short Term Stationary – 1 to 12 hours)

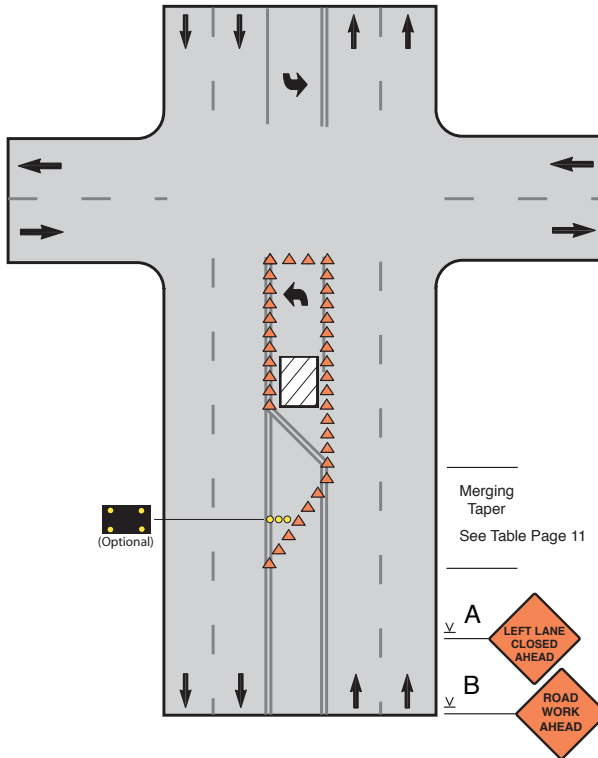

Notes:


1. Lane may be opened beyond work area.
2. The length of the tapers may be adjusted when used in close proximity to crossroads, curves, or other influencing factors.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)
25	200	200
30	200	200
35	350	350
40	350	350
45	500	500
50	500	500
55	500	500
60	1000	1600

Lane Closure on Far Side of Intersection

(Speeds of 35 mph or Less)

(Short Term Stationary – 1 to 12 hours)

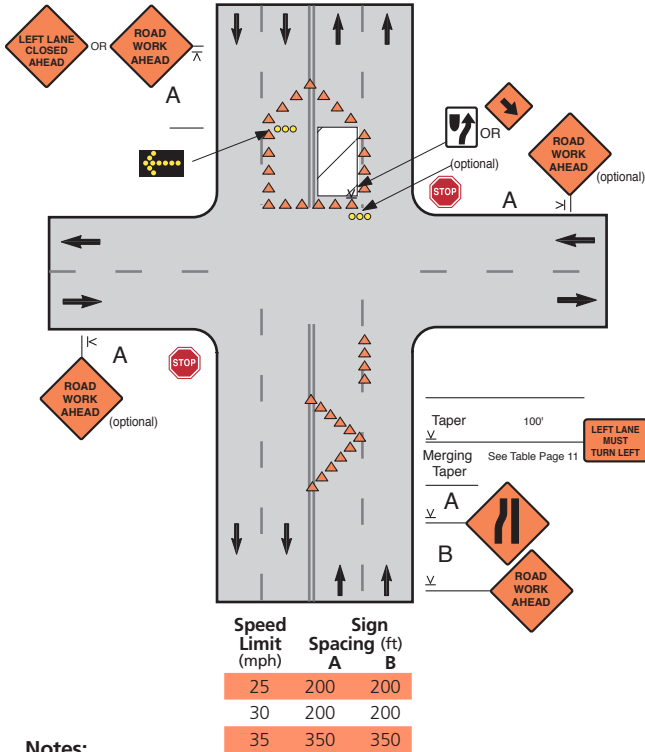


Notes:

1. This layout is only appropriate for roads with speeds of 35 MPH or less. For higher speeds, see table on page 25 for advance signing and taper layout.
2. Standard procedure is to close any lane that is not carried through the intersection on the near side of the intersection. However, if this results in the closure of a lane having significant turning movements, then that lane may be converted to a turn bay, and/or the lane may be restricted to turns only, as shown.
3. A LARGE ARROW sign may be used instead of the KEEP RIGHT or DOWN ARROW sign where space permits.

Closure in Center of Intersection

(Short Term Stationary – 1 to 12 hours)

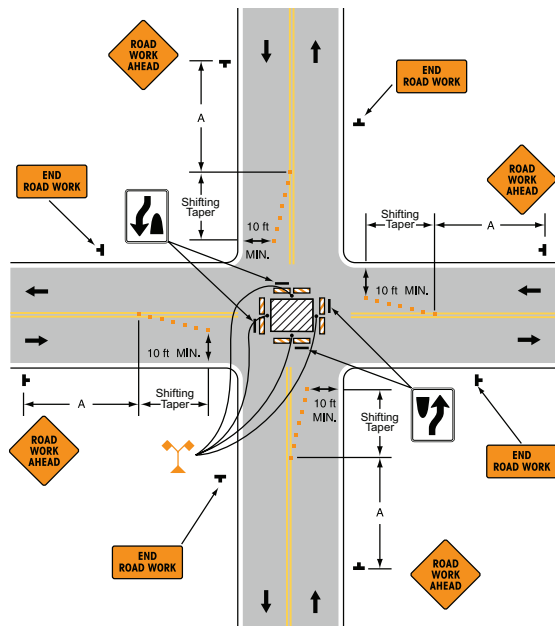


Notes:

1. Left turns may need to be prohibited.

Speed Limit (mph)	Sign Spacing A (ft)
30	200
35	350
40	350
45	500
50	500
55	500
60	1000

Short Duration
(up to 1 hour)


Work off the Traveled Lanes *(Includes Paved Shoulder < 8ft.)* *(Short Duration - Up to 1 Hour)*

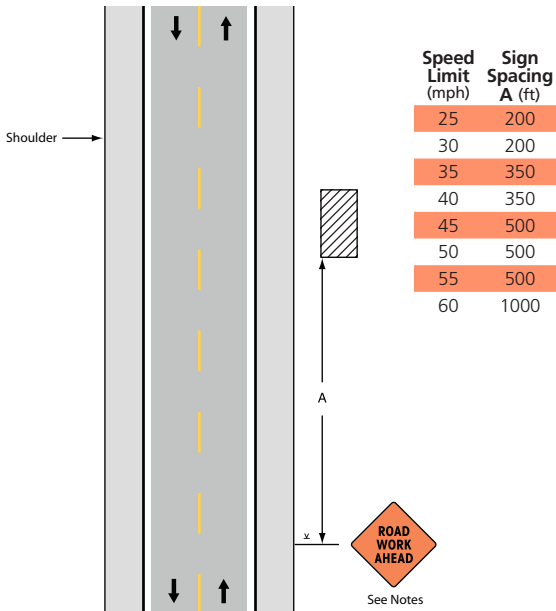

Notes:

1. Other acceptable advance warning signs are those indicating SHOULDER WORK, UTILITY WORK AHEAD, or the WORKERS sign.
2. An advance warning sign should be used; if the work will be performed immediately adjacent to the shoulder, if equipment will cross or move along the roadway, or if the activity may distract motorists.
3. Warning signs may be eliminated if the work space is behind a barrier, more than 2 ft. behind a curb, or 15 ft. or more from the edge of any roadway.
4. All warning signs and channelizing devices are optional if a vehicle with activated warning lights is used.


**Work on Paved Shoulders
or Parking Lane $\geq 8\text{ft}$.**
(Short Duration – up to 1 hour)

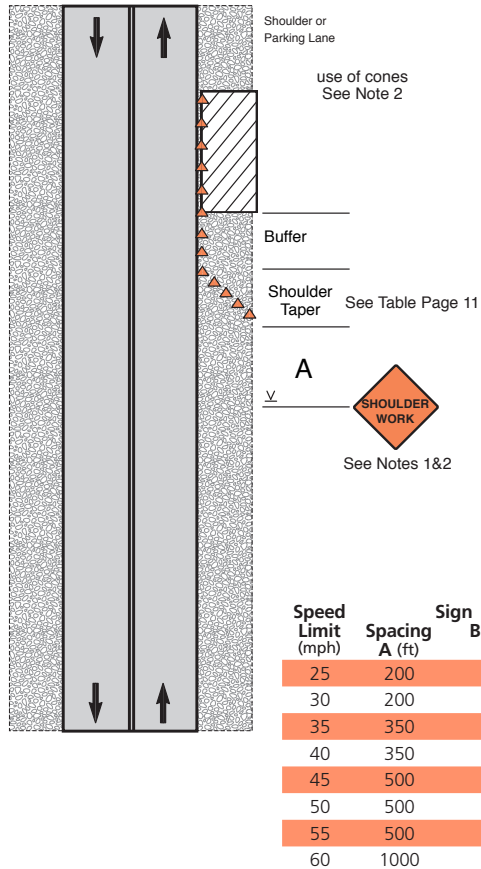

Notes:

1. Other standard MUTCD signs may be used.
2. Optional when the work vehicle displays activated warning lights.

**Work on Paved Shoulder \geq 8ft. Closed on
Divided Roadway**
(Short Duration – up to 1 hour)

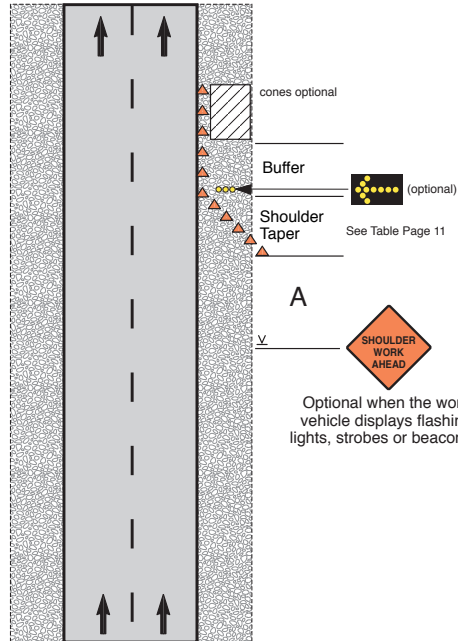


Notes:

1. Use of an arrow display is optional. If used, it shall be operated in the caution mode.

Speed Limit (mph)	Sign Spacing (ft) A	Buffer (ft)
30	200	85
35	350	120
40	350	170
45	500	220
50	1000	280
55	1000	335
60	1000	415
65	1000	485
70	1000	580

Lane Closure on Divided Roadway or One Way Street

(Short Duration – up to 1 hour)

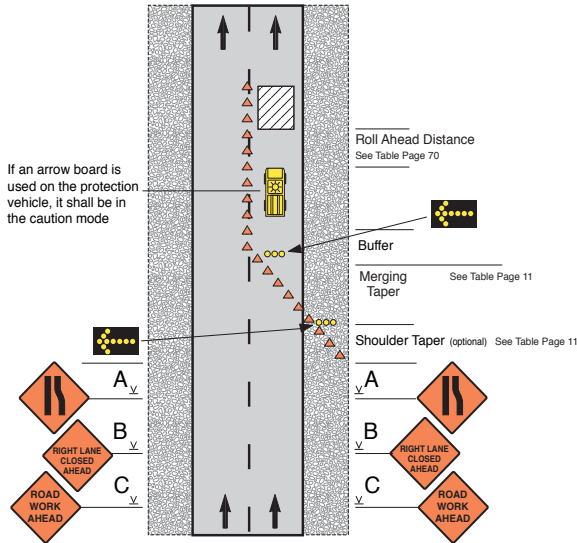


Notes:

1. When a side road intersects the roadway within the work zone, additional devices shall be erected to channelize traffic to/ from the side road, and a ROAD WORK AHEAD sign shall be placed on each side road approach.
2. For speed limits ≤ 40 mph speed limit, protection vehicle optional.

Speed Limit (mph)	Sign Spacing (ft)			Buffer (ft)
	A	B	C	
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	1000	1600	2600	280
55	1000	1600	2600	335
60	1000	1600	2600	415
65	1000	1600	2600	485
70	1000	1600	2600	580

Lane Closure on a Two-Lane Road (Two Flagger Operation) (Short Duration – up to 1 hour)

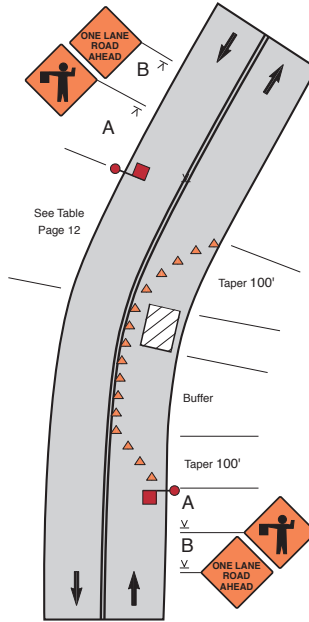

Notes:

1. The flagger or flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
2. If there is a sideroad intersection within the work area, additional traffic control, such as flaggers and appropriate signage, may be needed on the sideroad approaches.
3. Whenever a flagger is present, a FLAGGER AHEAD sign shall be used.
4. Cones are optional when using a protection vehicle with activated Warning Lights.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

Temporary Road Closure


(Short Duration – up to 20 minutes)

Notes:

1. Conditions represented are for work which requires closings during daytime hours only.
2. For high volume roads, a police patrol car and/or a changeable message sign may be added.
3. The flagger shall stop the first vehicle from the shoulder as shown. After stopping the first vehicle if the view of the flagger is obstructed, then he/she should move to the centerline to stop additional traffic.
4. Flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415


Lane Closure in Advance of an Intersection (Work Area on the Through Road) *(Short Duration – up to 1 hour)*

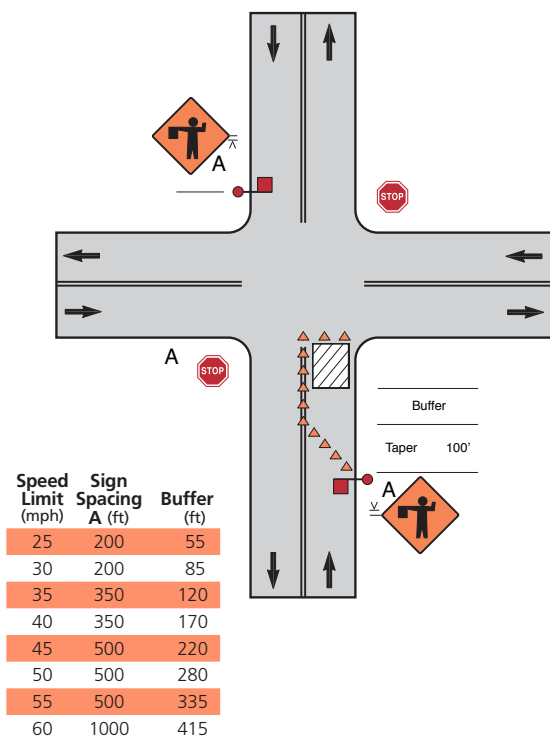

Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed on the side road approaches.
2. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
3. Whenever a flagger is present, a FLAGGER AHEAD sign shall be used.

Lane Closure in Advance of an Intersection (Work Area on the Side Road) (Short Duration – up to 1 hour)

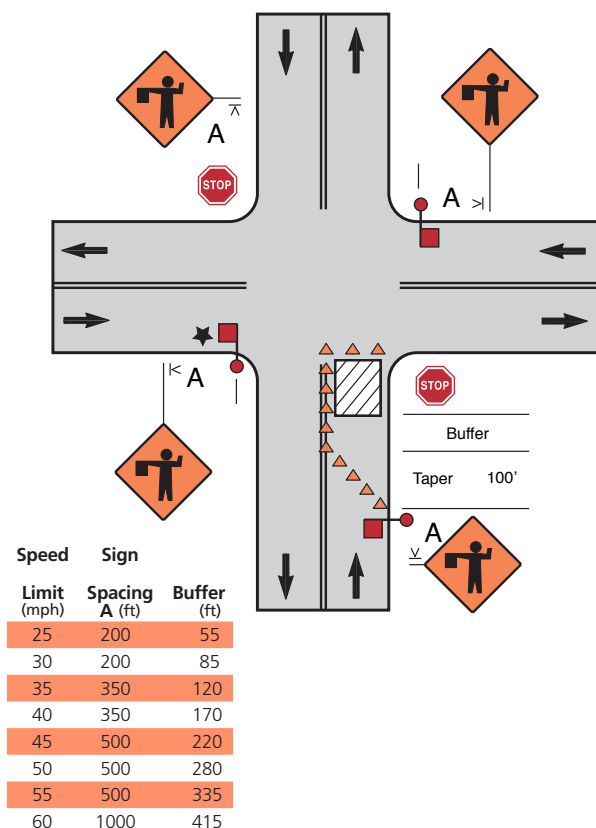


Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
- ★ 2. The middle flagger has the best view of traffic from all directions. This flagger should be designated *lead flagger* and should coordinate the actions of the other flaggers.
3. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.

Lane Closure Beyond an Intersection

(Work Area on the Through Road)

(Short Duration – up to 1 hour)

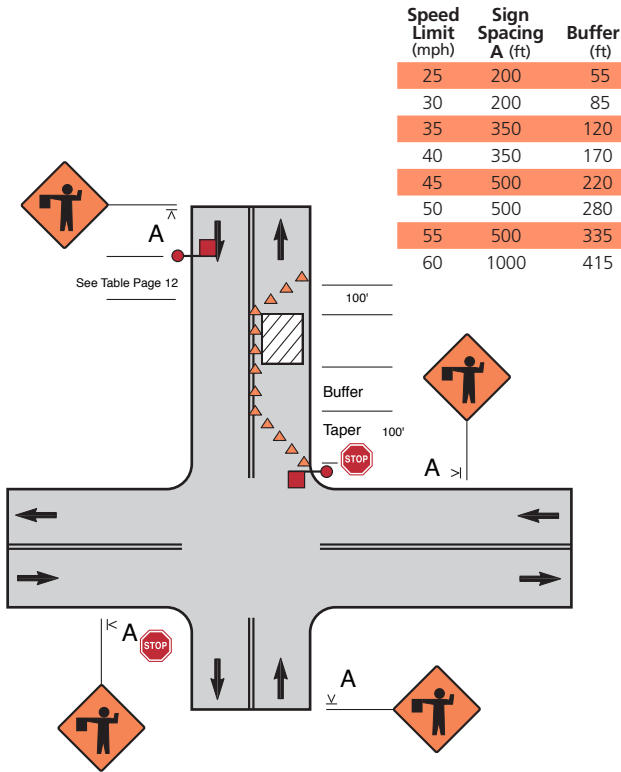


Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
2. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
3. When there is insufficient space the Taper and Buffer are not used.

Lane Closure Beyond an Intersection

(Work Area on the Side Road)

(Short Duration – up to 1 hour)

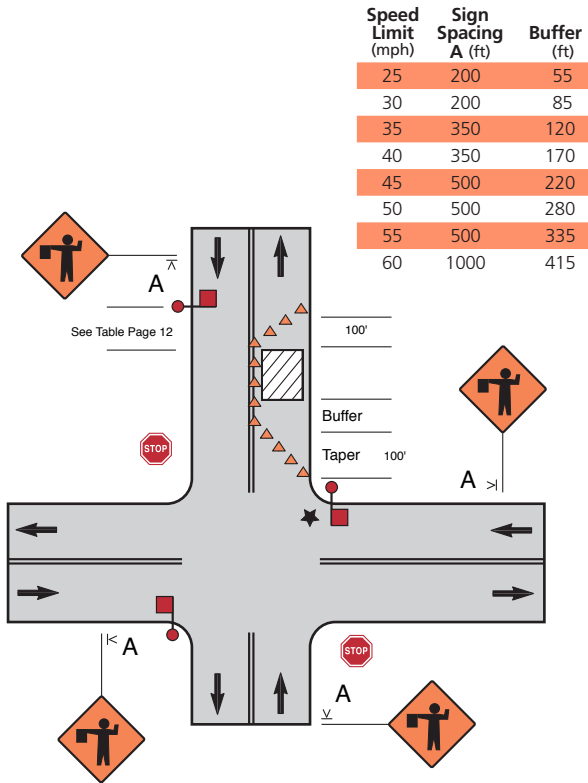


Notes:

1. Depending on traffic conditions, additional traffic control, such as flaggers and appropriate signage, may be needed.
2. The middle flagger should be designated **lead flagger** and should coordinate the actions of the other flaggers.
3. The flaggers shall use approved flagging procedures according to the MUTCD and as shown on page 74.
4. When there is insufficient space the Taper and Buffer are not used.

Lane Closure at Side of Intersection

(Short Duration – up to 1 hour)

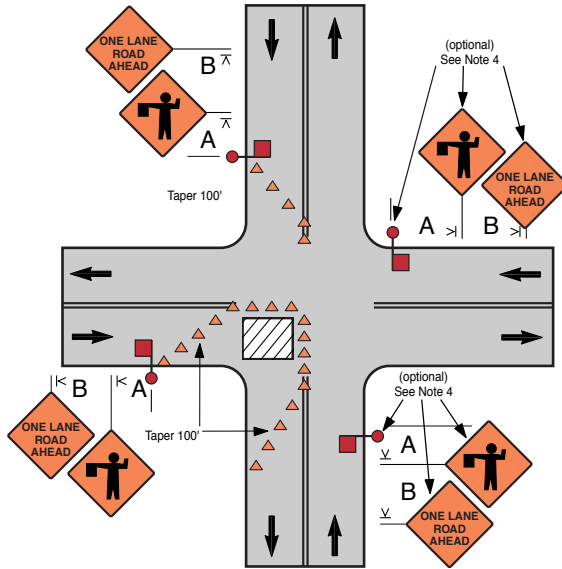


Notes:

1. For high traffic volumes or when a four-lane street is involved additional flaggers or law enforcement personnel may be used.
2. The situation depicted can be simplified by closing one or more of the intersection approaches. If this can not be done, and/or when capacity is a problem, consideration should be given to diverting through traffic to other roads or streets.
3. Flashing warning lights and/or flags may be used to call attention to the advanced warning signs.
4. Flaggers and signs for these approaches are optional. If the length of the closure and/or traffic warrant, additional flaggers and the appropriate signs should be used.
5. Cone taper at top of page is optional for stop sign or signalized approaches.

Speed Limit (mph)	Sign Spacing A, B (ft)	Buffer (ft)
25	200	55
30	200	85
35	350	120
40	350	170
45	500	220
50	500	280
55	500	335
60	1000	415

Closure in Center of Intersection

(Short Duration – up to 1 hour)

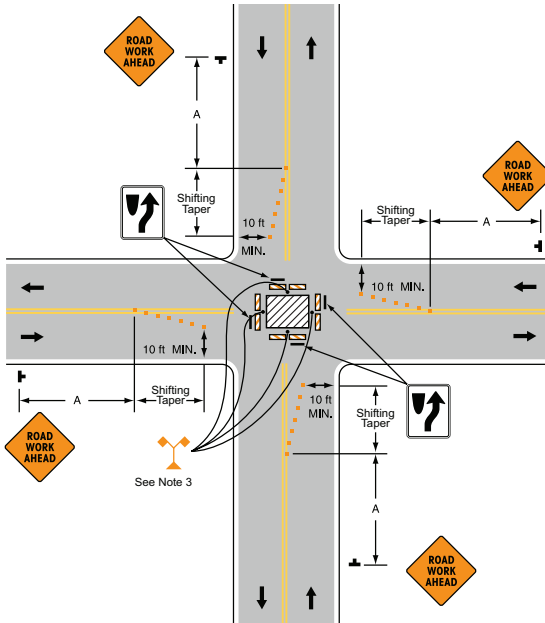


Notes:

1. Left turns may need to be prohibited.
2. Channelizing devices may be eliminated if a vehicle displaying rotating lights or strobe lights is positioned in the work space.
3. A high-level warning device should be placed in the work space, if there is sufficient room.

Speed Limit (mph)	Sign Spacing A (ft)
30	200
35	350
40	350
45	500
50	500
55	500
60	1000

Lane Closure at a Multilane Intersection (Short Duration – up to 1 hour)

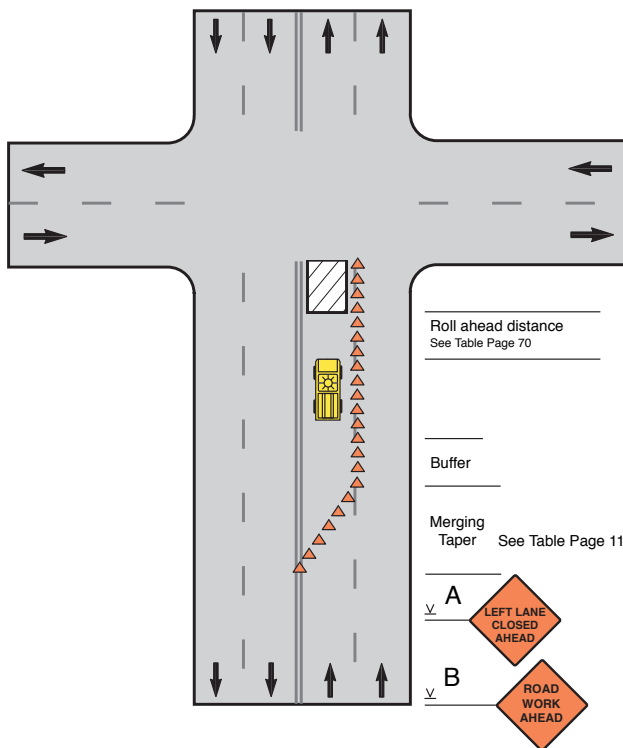


Notes:

1. For speed limits ≤ 40 mph, protection vehicle optional.
2. If working on far side of intersection, see page 44.
3. The length of tapers may be adjusted when used in close proximity to crossroads, curves, or other influencing factors.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Buffer (ft)
25	200	200	55
30	200	200	85
35	350	350	120
40	350	350	170
45	500	500	220
50	500	500	280
55	500	500	335
60	1000	1600	415

Turn Lane Closure at an Intersection (Short Duration – up to 1 hour)

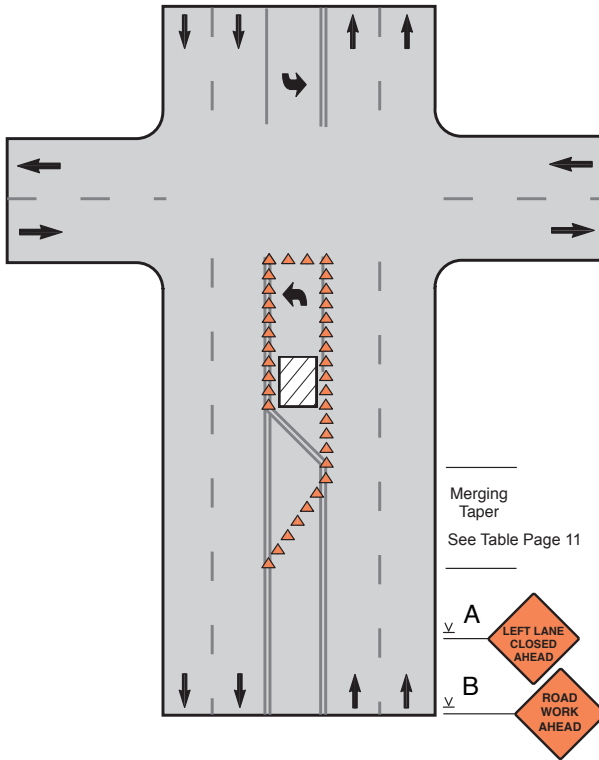


Notes:

1. Lane may be opened beyond work area.
2. The length of the tapers may be adjusted when used in close proximity to crossroads, curves, or other influencing factors.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)
25	200	200
30	200	200
35	350	350
40	350	350
45	500	500
50	500	500
55	500	500
60	1000	1600

Partial Ramp Closure *(Short Duration – up to 1 hour)*

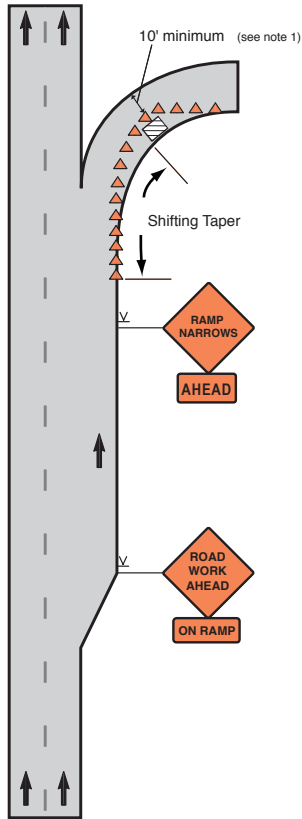


Notes:

1. Truck off-tracking should be considered when determining whether the 10' minimum lane width is adequate.
2. For work on the outside of the ramp, the cones will be shifted to that side, and the gore area extended upstream.

Partial Ramp Closure Work in Gore Area

(Short Duration – up to 1 hour)

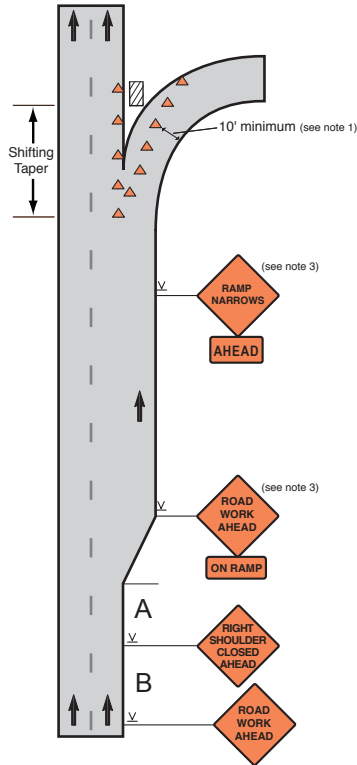

Notes:

1. Truck off-tracking should be considered when determining whether the 10' minimum lane width is adequate.
2. Protection vehicle recommended inside coned area, if roll ahead distance permits.
3. Required, if coned area or work area extends into the ramp.

Speed Limit (mph)	Sign Spacing (ft)	
	A	B
35	350	350
40	350	350
45	500	500
50	1000	1600
55	1000	1600
60	1000	1600
65	1000	1600
70	1000	1600

Mobile Operations

Mobile Operations

Mobile operations are work activities that move along the road either intermittently or continuously. Safety for mobile operations should not be compromised by using fewer devices simply because the operation will frequently change its location.

Portable devices should be used. For example, appropriately colored and marked vehicles with vehicle warning lights, perhaps augmented with signs or arrow displays, may be used in place of signs and channelizing devices.

For mobile operations to be successful, the advance warning area for these operations must move with the work area or be repositioned periodically to provide advanced warning for the motorist.

Intermittent Mobile Operations – These mobile operations often involve frequent short stops that are similar to stationary operations. Warning signs, flashing vehicle lights, and/or channelizing devices should be used.


With operations that move slowly (less than 3 MPH), it may be feasible to use stationary signing that is periodically retrieved and repositioned in the advance warning area. In addition, vehicles may be equipped with such devices as vehicle warning lights, truck mounted attenuators, and appropriate signs.

Flaggers may be used, but caution must be exercised so they are not exposed to unnecessary hazards.

Continuously Moving Mobile Operations – These mobile operations include work activities in which workers and equipment move along the road without stopping, (e.g. pavement striping, mowing, street sweeping, or herbicide spraying), usually at slow speeds.

For some continuously moving operations where volumes are light and visibility is good, a well-marked and well-signed vehicle may suffice. If volumes and/or speeds are higher, a shadow or protection vehicle, equipped as a sign truck, should follow the work vehicle. The advance warning area moves with the work area. If a lead vehicle is utilized, then an END CONSTRUCTION sign should be used to help identify the end of the work zone.

***Mobile Operation on Paved Shoulder
≥8ft. for all Roads***

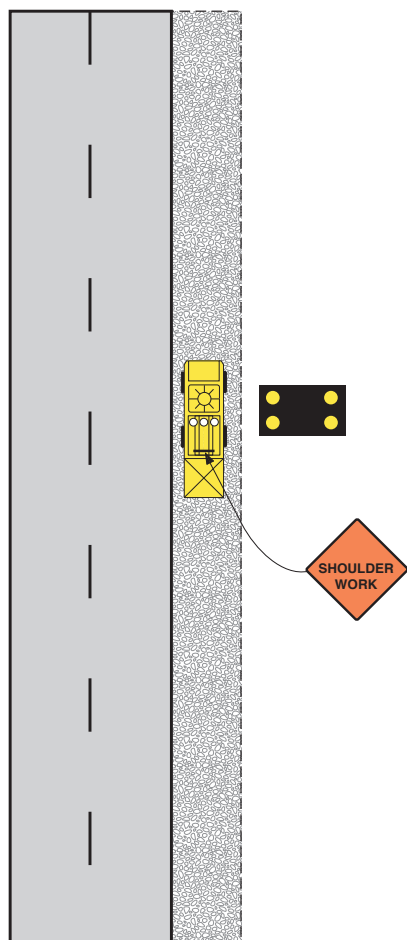

Mobile Operation on the Shoulder (cont.)


Notes:

1. If the operation requires encroachment on the travelway, a mobile or stationary lane closure should be used.
2. For operations that move slowly (less than 3 mph) and in situations where multiple work locations in a limited distance make it practical to place stationary signs, the maximum spacing from the advanced warning sign to the beginning of the work is 5 miles.
3. The LENGTH OF WORK sign or a supplemental panel (Next x Miles) may be used for work zones of more than 2 miles in length.
4. If the distance between work locations is one mile or more, and if the work vehicle travels at traffic speeds between locations, warning signs are not required if vehicle warning lights are used.
5. Other acceptable advanced warning signs include SHOULDER WORK, UTILITY WORK AHEAD, MOWING, WORKER signs, and ROAD MACHINERY AHEAD.
6. Table below shows recommended roll-ahead distances between a protection vehicle with or without a truck-mounted attenuator (TMA) and the work area for both stationary and mobile operations. Roll-ahead distance for the protection vehicle may vary depending upon recommendations of the TMA manufacturer.

Roll-ahead Distances for TMAs and protection vehicle

Speed	Stationary	Mobile
≤45 mph	100 ft	150 ft
50-55 mph	150 ft	200 ft
60-65 mph	200 ft	275 ft
70 mph	225 ft	325 ft

Mobile Operation on a Two-Lane Road

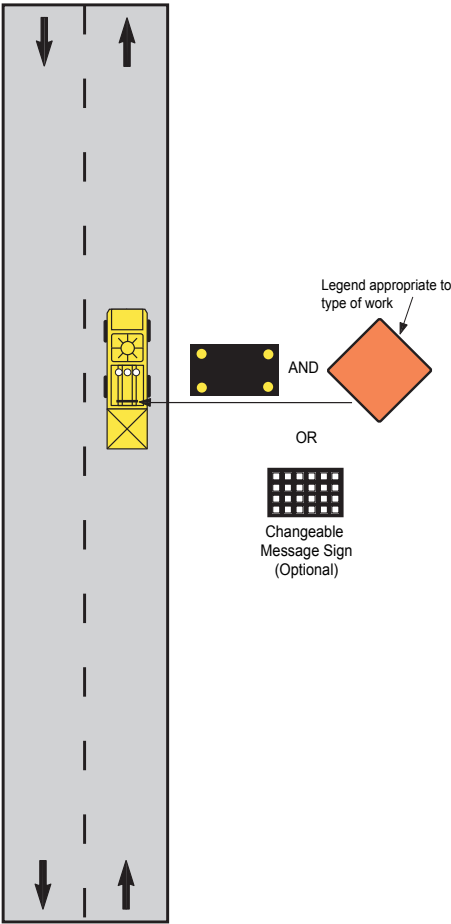

Roll-ahead Distances for TMAs and protection vehicle


Speed	Stationary	Mobile
≤45 mph	100 ft	150 ft
50-55 mph	150 ft	200 ft
60-65 mph	200 ft	275 ft
70 mph	225 ft	325 ft

Mobile Operation on a Two-Lane Road (cont.)

Notes:

1. Where practicable and when needed, the work and protection vehicles should pull over periodically to allow traffic to pass. If this can not be done frequently, as an alternative, a "DO NOT PASS" sign may be placed on the rear of the vehicle blocking the lane.
2. Flaggers may be used. If flaggers are used, then a FLAGGER AHEAD and a ONE LANE ROAD AHEAD sign shall be used in each direction. If flaggers are used for more than 1 hour, then a ROAD WORK AHEAD sign shall be used as well. Refer to Page 12 for flagger placement.
3. The distance between the work and protection vehicle may vary according to terrain, paint drying time, and other factors. Protection vehicles are used to warn traffic of the operation ahead. Whenever adequate stopping sight distance exists to the rear, the protection vehicle should maintain the minimum roll ahead distance and proceed at the same speed as the work vehicle. The protection vehicle should slow down in advance of vertical or horizontal curves that restrict sight distance.
4. Sign legends shall be covered or turned from view when work is not in progress.

Mobile Operation on a Two-Lane Road Using Flaggers

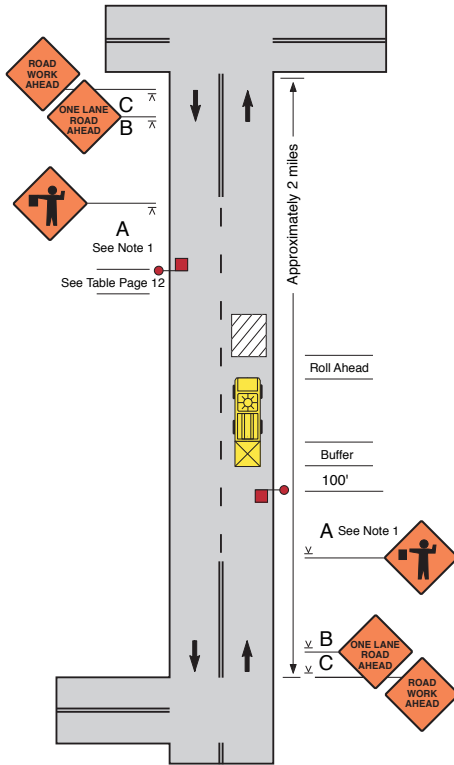


Notes:

1. Distance A may be extended to a maximum of 3,500 ft.
2. If flaggers are used <1 hr., the ROAD WORK AHEAD signs may be omitted.

Speed Limit (mph)	Sign Spacing A (ft)	Sign Spacing B (ft)	Sign Spacing C (ft)	Buffer (ft)
25	200	200	200	55
30	200	200	200	85
35	350	350	350	120
40	350	350	350	170
45	500	500	500	220
50	500	500	500	280
55	500	500	500	335
60	1000	1600	2600	415


Mobile Operation on a Two-Lane Divided Road

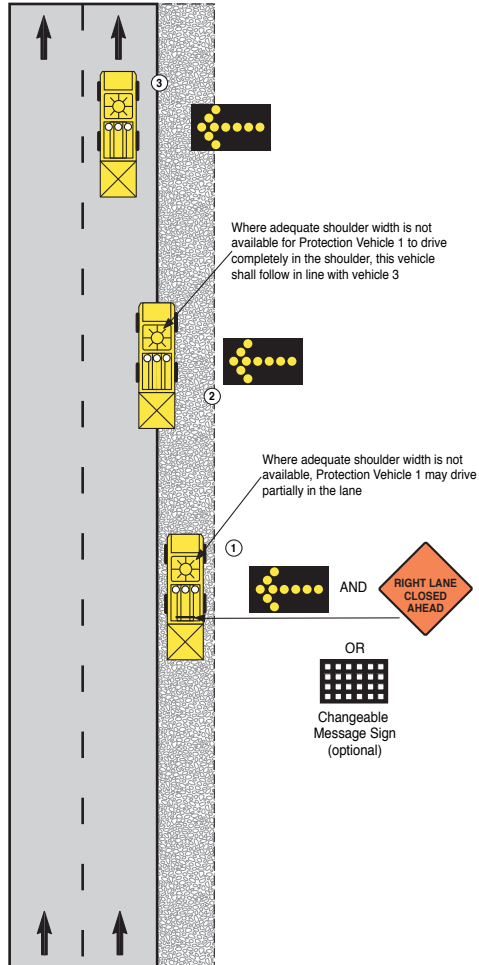

Notes:

1. See notes and table on page 70.

Mobile Operation on a Multi-Lane Divided Road

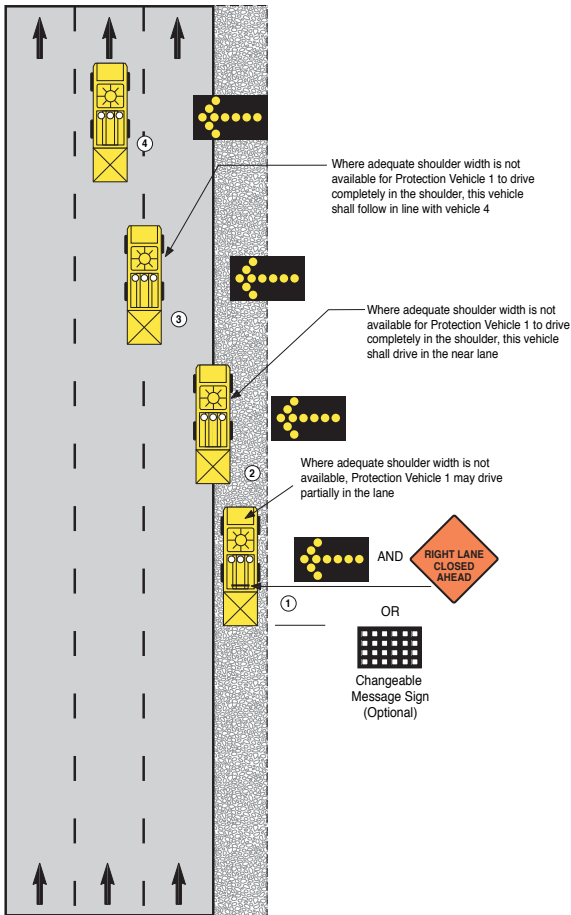

Notes:

1. See notes and table on page 70.

Mobile Operation on a Multi-Lane Road (cont.)

Notes:

1. Protection vehicle #1 should travel at a varying distance from the work operation so as to provide adequate sight distance for traffic approaching from the rear.
2. Stationary advance warning signs may be used to provide additional advance warning for the operation. These signs might include: SLOW MOVING TRAFFIC AHEAD, ROAD WORK AHEAD, PAINT CREW AHEAD, etc. These signs and/or a changeable message sign should be used where speeds and volumes are high, or where sight distance is limited. If used these signs shall be spaced a maximum of 5 miles from protection vehicle #1.
3. If stationary signs are used and the activity is spread out over a distance of more than 2 miles, the LENGTH OF WORK Sign or a supplemental panel should be used.
4. Work should normally be done during off-peak hours.
5. Protection Vehicle (PV) spacing:
 - Between Work Vehicle and nearest PV, refer to roll ahead table below
 - Approximately 500' between middle PV's
 - 1000' - 2000' between PV#2 and PV#1.
Urban roadways may require shorter distances.
Exact spacing will be determined by the crew leader.
6. In an urban, non-interstate area, the number of protection vehicles may be reduced.

Roll-ahead Distances for TMA's and protection vehicle

Speed	Stationary	Mobile
≤45 mph	100 ft	150 ft
50-55 mph	150 ft	200 ft
60-65 mph	200 ft	275 ft
70 mph	225 ft	325 ft

Pedestrian and Worker Safety

Pedestrian Safety

If pedestrian travel paths (sidewalks or footpaths) are closed or disrupted by a construction, maintenance, or utility operation, then pedestrian traffic control is needed. This includes the use of signs, channelizing devices, flags, etc. to direct pedestrian movement through or around the work site.

The major considerations in planning for pedestrian safety in temporary traffic control zones on streets and highways are:

- Pedestrians should not be led into direct conflicts with work site vehicles, equipment, or operations.
- Pedestrians should not be led into direct conflicts with mainline traffic moving through or around the work site.
- Pedestrians should be provided with a safe, convenient travel path that replicates as nearly as possible the most desirable characteristics of sidewalks or footpaths.
- Pedestrians need protection from potential injury and a smooth, clearly defined travel path. Obstructions should be clearly marked, especially at night.

Worker Safety


The safety of workers in a work site is just as important as the safety of the public traveling through the work zone. The best protection for both is good work zone traffic control.

All workers should be trained in how to work next to traffic in a way that minimizes their vulnerability. In addition, workers with specific traffic control responsibilities should be trained in traffic control techniques, device usage, and placement.

Workers exposed to traffic shall be attired in INDOT approved apparel including, but not limited to safety vests and hats.

For nighttime work, similar outside garments shall be retro-reflective and shall be designed to identify clearly the wearer as a person and be visible through the full range of body motions (i.e. retroreflective material on the front, back, and both sides of the garment).


Sidewalk Closure (Pedestrian Detour)

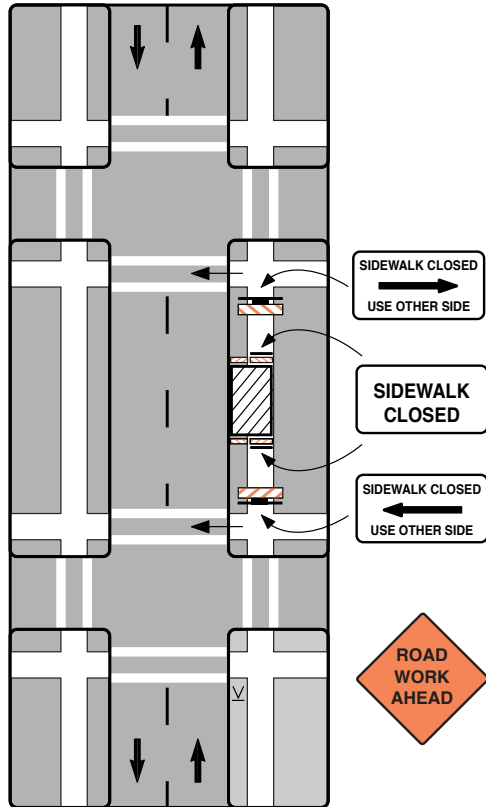

Notes

1. Additional advance warning may be necessary.
2. Only the traffic control devices controlling pedestrian flows are shown. Other devices may be needed to control traffic on the streets. Use lane closure signing, ROAD NARROWS or LANE NARROWS signs as needed.
3. For nighttime closures, Type A flashing warning lights may be used on barricades supporting signs and closing walkways.


Sidewalk Closure *(Pedestrian Walkway Provided)*

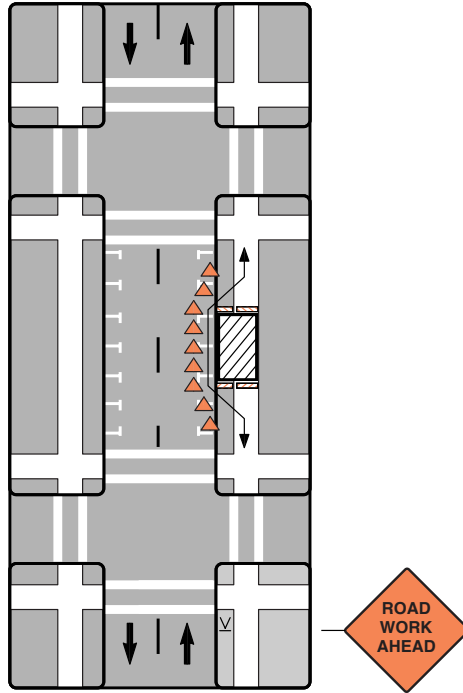

Notes:

1. Additional advance warning may be necessary.
2. Only the traffic control devices controlling pedestrian flows are shown. Other devices may be needed to control traffic on the streets. Use lane closure signing, ROAD NARROWS or LANE NARROWS signs, as needed.
3. For nighttime closures, Type A flashing warning lights may be used on barricades supporting signs and closing walkways. Type C steady-burn lights may be used on channelizing devices separating the temporary walkway from vehicular traffic.
4. Where high speeds are anticipated, use a barrier to separate the temporary walkway from vehicular traffic. Refer to Section 6D-1 of Part VI of the MUTCD for information on barriers.
5. Signs may be placed along a temporary walkway to guide or direct pedestrians; for example, KEEP RIGHT or KEEP LEFT signs.

Flagging Procedures

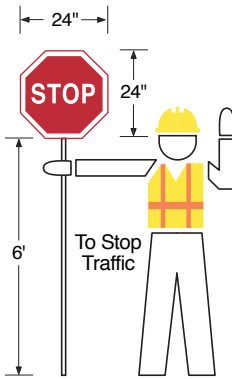


Properly Trained Flaggers

- give clear messages to drivers as shown
- allow time and distance for drivers to react
- coordinate with other flaggers

Properly Equipped Flaggers

- approved sign paddles
- paddles are not to be used in a signalized intersection
- approved safety vest, shirt or coat
- brightly colored hat for better visibility
- retroreflective night equipment

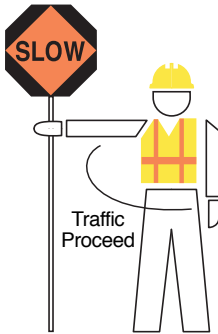

Proper Flagging Stations

- good approach sight distance
- highly visible to traffic
- never stand in moving traffic lane
- always have an escape route



Proper Advance Warning Signs

- always use warning signs
- allow reaction distance from signs
- remove signs if not flagging

Flags should only be used in emergency situations for controlling traffic at a signalized intersection, or when a paddle would present a conflicting message to the motorist. Flags used for signaling shall be a minimum of 24" x 24", red in color and mounted on a staff, about 3' long.

Acknowledgments

This guide was adapted for use in Indiana by the Indiana Department of Transportation (INDOT) and the Indiana Local Technical Assistance Program (LTAP) from one produced by the Institute for Transportation Research and Education (ITRE) at North Carolina State University. INDOT and LTAP acknowledge and thank ITRE and the many agencies and associations in North Carolina and South Carolina that were involved in the original development of this guide on work zone traffic control.

The Indiana team that reviewed the ITRE version of the *Work Zone Safety Handbook* and adapted it to reflect Indiana practice included representatives of the operations safety coordinators, maintenance, safety, and traffic sections of INDOT; Allen County; Montgomery County; Tipton County; City of Lebanon; Town of Flora; and the Indiana LTAP Center at Purdue University.

Information and Training

For further information and training opportunities in basic work zone traffic control, flagging, and other street and highway design, operation, and maintenance topics contact the Indiana LTAP Center, a project of the Purdue University Civil Engineering Department, funded as a Local Transportation Assistance Program by the Federal Highway Administration, and Indiana Department of Transportation.

Indiana LTAP Center
Purdue University
1284 Civil Engineering Building, Room B141
West Lafayette, IN 47907
800-428-7639 phone (Indiana only)
765-496-1197 fax
email: jhaber@ecn.purdue.edu
web site: <http://www.ecn.purdue.edu/INLTAP>

Quick Reference Guide

Spacing of Advance Warning Signs (Page 2)

Sign Spacing (feet)					
	25-30 mph	35-40 mph	45-55 mph	Multilane Divided 50 mph or higher	Expressway/ Freeway
A	100	350	500	1,000	1,000
B	100	350	500	1,600	1,600
C	100	350	500	2,640	2,640

Distances shown are approximate. Sign spacing should be adjusted for curves, hills, intersections, driveways, etc., to improve sign visibility.

TABLE II INDOT STANDARD TAPERS (Page 11)

	Speed (mph)	Shoulder Tapers			Shifting Tapers			Merging Tapers		
		L	CS	#	L	CS	#	L	CS	#
Low Speed	30	60	20	3	90	20	5	180	20	9
	35	90	20	5	140	20	7	260	20	13
	40	120	40	3	160	40	4	320	40	8
High Speed	45	200	40	5	280	40	7	560	40	14
	50	200	50	4	300	50	6	600	50	12
	55	220	50	5	350	50	7	700	50	14
	60	240	60	4	360	60	6	720	60	12
	65	300	60	5	400	60	7	780	60	13
	70	300	60	5	420	60	7	840	60	14
2-Way & Downstream Tapers are always 100/20/6										
L=Length CS=Cone Spacing #=Quantity of Cones										

Guidelines for Buffer Lengths (Page 12)

Speed (mph)	Length (ft)
20	35
25	55
30	85
35	120
40	170
45	220
50	280
55	334
60	415
65	485
70	580

Distance of Flagger Station in Advance of the Workspace (Page 12)

Speed (mph)	Distance	Speed (mph)	Distance
20	35	45	220
25	55	50	280
30	85	55	335
35	120	60	415
40	170	65	485

